


HIGH-TORQUE DRIVES

(SD/MD/UD/XD 1-SPEED, 2-SPEED & HIGH-POWER)

OPERATOR'S MANUAL

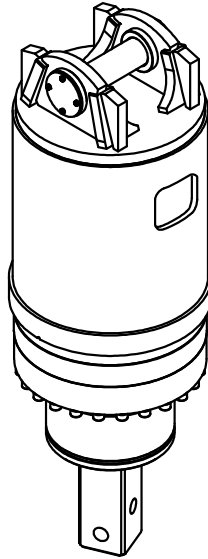


V2.0



PM-000239

MY.DIGGA.COM

SCAN THIS

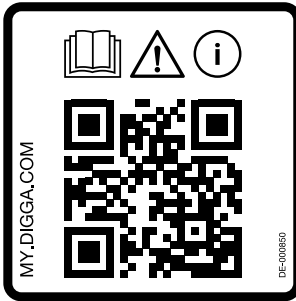

QR CODE

DECAL IS APPLIED TO THE ATTACHMENT

MY.DIGGA.COM

SCAN THIS



QR CODE

DECAL TO BE APPLIED TO WINDOW OF THE MACHINE

ACCESS OPERATOR MANUALS RISK ASSESSMENTS AND MORE

Table of Contents

- Table of Contents 3
- Critical Information - Service Intervals 4
- To The Purchaser 5
- Product Identification. 6
- Service & Preparation for Use. 8
- Safety Precautions - General Information. 9
- Safety - Working with the Attachment. 16
- Safety - Decal Labels 19
- Safety - Decal Locations 22
- Before Use 23
- Commissioning Procedure 25
- Hydraulic motor general arrangement. 27
- Hydraulic motors specifications. 31
- Commissioning Procedure 32
- Operating Instructions. 36
- 2 Speed Installations-Electrics 43
- Technical Specifications 52
- Maintenance 53
- Spare Parts 61
- Contact Informantion. 62
- Troubleshooting 63
- Warranty Statement 66
- Notes 67

Critical Information - Service Intervals

NOTE

Do not connect or operate your Planetary drive unit without first having read and understood the following statement.

Your Digga Planetary drive unit is a high performance attachment that is designed for drilling, screw anchoring (pier) installation, core barreling and other extreme applications where it is seeing high levels of torque. To avoid premature wear and failure, and to fulfil your terms of warranty please read this statement.

All Digga Planetary drive units must have a first oil change within the first 30 hours (extreme use) or 50 hours (moderate use) or 3 months of use, which ever comes first to ensure the bed in of the drive unit.

For more detailed information please read the maintenance section of this manual.

If the first oil change is not performed within this period, excessive wear within the gearbox will occur that will cause premature failure and all Warranty will be voided.

Oil must then be changed thereafter every 300 hours (extreme use) or 500 hours (moderate use) and a full service every 12 months must be performed by an authorised service agent to ensure Warranty requirements are met.

In the event of a failure under the warranty period:

- Contact Digga immediately, do not disassemble your drive without first obtaining written permission and instructions from Digga.
- Proof of service must be provided in hard copy form of both operational and service history records (including serial number of gearbox and hydraulic motor). Service must be performed by a competent service agent.

Thank you and congratulations on the purchase of your new Digga Planetary Drive Unit.

This product was carefully designed and manufactured to give you years of dependable service. It is mandatory that oil changes are performed at the specified interval to keep it in top working condition (for details see the maintenance section of this manual).

Before Operation

Inspect the attachment for shipping damage and if any damage does exist, do not operate until the damaged parts have been replaced or repaired. The primary responsibility for safety with this equipment falls to the operator. Make sure the equipment is operated only by trained individuals that have read and understood this manual. If there is any portion of this manual or function you do not understand, contact your local authorized Digga dealer or the manufacturer to obtain further assistance. Keep this manual available for reference. Provide the manual to any new owners and/or operators.

About This Manual

This manual has been designed to help you do a better and safer job. **Read this manual carefully and become familiar with its contents before connecting and operating this unit.**

Service

Use only manufacturer replacement parts. Substitute parts may not meet the required standards.



CAUTION


Never allow anyone operate this attachment without reading the “Safety precautions” and “Operating instructions” sections of this manual. Always choose hard and level ground to park the vehicle on and set the brake, so the unit cannot roll.

Product Identification

MODELS COVERED IN THIS MANUAL							
1-SPEED / 2-SPEED				HIGH-POWER			
SD-45	MD-110	UD-190	XD-270	SD-45 HP/HPT	MD-110 HPT	UD-190 HPT	PD-30 HP
SD-50	MD-115	UD-220	XD-310	SD-50 HP/HPT	MD-160 HPT	UD-220 HPT	
SD-60	MD-160	UD-250	XD-410	SD-55 HP/HPT	MD-190 HPT	UD-250 HPT	
SD-70	MD-170	UD-300	XD-500	*SD-60 HP		UD-270 HPT	
SD-80	MD-190			SD-60 HPT		UD-300 HPT	
SD-95				SD-80 HP/HPT			
				SD-95 HP/HPT			

Your Digga Planetary Drive unit's model provides important information about the product. Compare the model engraved on the serial plate to the code broken-down below. The torque displayed on the model code is a commercial denomination. Refer to the torque chart for precise figures. Customised gearboxes might show a code not covered by the key below.

E.g. SD40-HP-7-RV

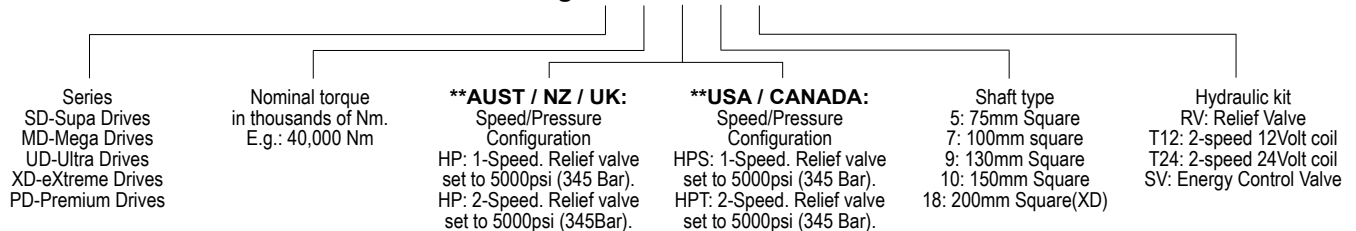

* SD-60 HP have been discontinued.

** Speed/Pressure Configuration naming changes with location. If HP is shown not in the long code description, pressure relief value is set to 3500psi (240 Bar).

Product Identification

During the specified warranty period, your Digga Planetary drive unit is a user non serviceable part and unauthorised disassembly will void warranty. All service and warranty must be performed by an authorised Digga service agent. Contact your local Digga dealer for details. To facilitate warranty or service, record the model and serial number of your unit in the space provided on this page. This information may be obtained from the identification plate located on the product.

DIGGA www.digga.com	<input type="radio"/> Digga Australia PTY LTD 4 Octal St, Yatala QLD 4207 Australia	<input type="radio"/>
Model	<input type="text"/>	MADE IN AUSTRALIA DE-000631
Name	<input type="text"/>	
Serial No.	<input type="text"/>	
Flow (max)	<input type="text"/>	
Pressure (max)	<input type="text"/>	
Power (max)	<input type="text"/>	
Approx. Oil Capacity	<input type="text"/>	RPM (max)
<input type="text"/>	<input type="text"/>	<input type="text"/>
	<input type="text"/>	Yr. Manuf.
	<input type="text"/>	Weight
	<input type="text"/>	<input type="text"/>

*DE-000631 - AUS & NZ

<input type="radio"/> DIGGA www.digga.com	<input type="radio"/> Digga Australia PTY LTD 4 Octal St, Yatala QLD 4207 Australia	<input type="radio"/>
Model	<input type="text"/>	MADE IN AUSTRALIA DE-000632
Name	<input type="text"/>	
Serial No.	<input type="text"/>	
Flow (max)	<input type="text"/>	
Pressure (max)	<input type="text"/>	
Power (max)	<input type="text"/>	
Approx. Oil Capacity	<input type="text"/>	RPM (max)
<input type="text"/>	<input type="text"/>	<input type="text"/>
	<input type="text"/>	Yr. Manuf.
	<input type="text"/>	Weight
	<input type="text"/>	<input type="text"/>

DE-000632 - AUS & NZ

DIGGA <input type="radio"/> <input type="radio"/>	<input type="radio"/> Digga Australia PTY LTD 4 Octal St, Yatala QLD 4207 Australia	<input type="radio"/> UK <input type="radio"/> CA
Model	<input type="text"/>	MADE IN AUSTRALIA DE-000626
Name	<input type="text"/>	
Serial No.	<input type="text"/>	
Flow (max)	<input type="text"/>	
Pressure (max)	<input type="text"/>	
Power (max)	<input type="text"/>	
Approx. Oil Capacity	<input type="text"/>	RPM (max)
<input type="text"/>	<input type="text"/>	<input type="text"/>
	<input type="text"/>	Yr. Manuf.
	<input type="text"/>	Weight
	<input type="text"/>	<input type="text"/>

*DE-000626 - EU & UK

<input type="radio"/> DIGGA www.digga.com	<input type="radio"/> Digga Australia PTY LTD 4 Octal St, Yatala QLD 4207 Australia	<input type="radio"/> UK <input type="radio"/> CA	<input type="radio"/> <input type="radio"/>
Model	<input type="text"/>	MADE IN AUSTRALIA DE-000627	
Name	<input type="text"/>		
Serial No.	<input type="text"/>		
Flow (max)	<input type="text"/>		
Pressure (max)	<input type="text"/>		
Power (max)	<input type="text"/>		
Approx. Oil Capacity	<input type="text"/>	RPM (max)	
<input type="text"/>	<input type="text"/>	<input type="text"/>	
	<input type="text"/>	Yr. Manuf.	
	<input type="text"/>	Weight	
	<input type="text"/>	<input type="text"/>	

DE-000627 - EU & UK

DIGGA <input type="radio"/> <input type="radio"/>	<input type="radio"/> Digga North America 2325 Industrial Parkway SW Olympia, WA 98504 USA	<input type="radio"/> UK <input type="radio"/> CA
Model	<input type="text"/>	MADE IN THE USA DE-000628
Name	<input type="text"/>	
Serial No.	<input type="text"/>	
Flow (max)	<input type="text"/>	
Pressure (max)	<input type="text"/>	
Power (max)	<input type="text"/>	
Approx. Oil Capacity	<input type="text"/>	RPM (max)
<input type="text"/>	<input type="text"/>	<input type="text"/>
	<input type="text"/>	Yr. Manuf.
	<input type="text"/>	Weight
	<input type="text"/>	<input type="text"/>

*DE-000628 - NORTH AMERICA

<input type="radio"/> DIGGA www.diggausa.com	<input type="radio"/> Digga North America 2325 Industrial Parkway SW Olympia, WA 98504 USA	<input type="radio"/> UK <input type="radio"/> CA	<input type="radio"/> <input type="radio"/>
Model	<input type="text"/>	MADE IN THE USA DE-000629	
Name	<input type="text"/>		
Serial No.	<input type="text"/>		
Flow (max)	<input type="text"/>		
Pressure (max)	<input type="text"/>		
Power (max)	<input type="text"/>		
Approx. Oil Capacity	<input type="text"/>	RPM (max)	
<input type="text"/>	<input type="text"/>	<input type="text"/>	
	<input type="text"/>	Yr. Manuf.	
	<input type="text"/>	Weight	
	<input type="text"/>	<input type="text"/>	

DE-000629 - NORTH AMERICA

Model: _____

Serial Number: _____

Purchase Date: _____

NOTE


The parts department needs this information to ensure accurate parts can be sent to the authorised service agent.

The DIGGA Serial Tag number is dependant on the region as shown above.

* These Digga Serial Tags are for the PD-30 HP drive.

Service & Preparation for Use

To avoid any inconvenience before operation, please check that you have received the following items which you may have ordered. Items may differ depending on type of machine on which the drive units are to be fitted to.

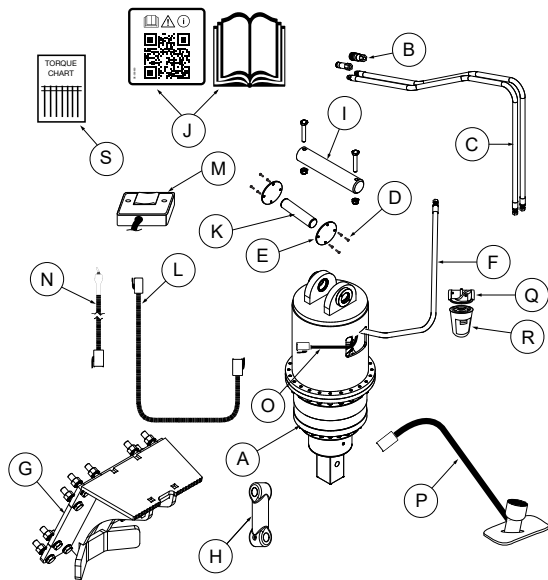

REF	DESCRIPTION	QTY	SINGLE SPEED	2-SPEED 12V / 24V
A	DRIVE UNIT	1	•	•
B	QUICK RELEASE COUPLERS	set	Optional	Optional
C	HYDRAULIC HOSE KIT	set	Optional	Optional
D	BOLT	8	•	•
E	HOOD COVER	2	•	•
F	3M CASE DRAIN HOSE & FITTINGS	1	•	•
G	RYNO HITCH	1	Optional	Optional
H	LINKAGE	1	Optional	Optional
I	PIN WITH BOLTS (PREMIUM DRIVE ONLY)	1	•	•
J	OPERATORS MANUAL OR QR-CODE	1	•	•
K	PIN	1	•	•
L	EXTENSION HARNESS (3M, 6M, 12M OR 15M)	1	N/A	•
M	SPEED CONTROLLER	1	N/A	•
N	REMOTE TOGGLE SWITCH (2-SPEED)	1	N/A	Optional
O	DIGGA MOTOR CONTROL HARNESS	1	N/A	•
P	REMOTE FLOOR MOUNTED SWITCH (2-SPEED)	1	N/A	Optional
Q	CASE DRAIN FILTER HEAD	1	Optional	Optional
R	CASE DRAIN FILTER ELEMENT	1	Optional	Optional
S	TORQUE CHART	1	•	•

***Note:** • Denotes supplied.

Safety Precautions - General Information

You must understand all safety statements shown on your attachment and in this manual. Especially note the information called out by the designations shown below. Follow these safety precautions, when operating or maintaining the attachment.

DANGER

The **DANGER** designation indicates an imminently hazardous situation that, if not avoided, will result in death.

WARNING

The **WARNING** designation indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury.

CAUTION

The **CAUTION** designation indicates a potentially hazardous situation that, if not avoided, could result in minor or moderate injury or property damage.

NOTE

You will also see information called out with the **NOTE** designation. This additional safety or general information is important to the maintenance and operation of your loader.

During day-to-day operation of your attachment, you will encounter a variety of situations beyond those listed in this manual. We encourage you to assess the risk present at any job site and in every work task before beginning work. Apply appropriate risk mitigation strategies to make safety a first priority at all times, and if these are not sufficient, stop the job and immediately seek the help of a qualified safety consultant.

Safety Precautions - General Information

Know where utilities are

- Observe overhead electrical and other utility lines. Be sure the equipment will clear them.
- Before starting any digging project, lodge an enquiry with BYDA (Before you Dig Australia) or your local utilities location service for the identification of buried electrical, telephone, cable wires, gas, water and sewer lines are likely to be present. Unintentionally disrupting these hidden hazards while working with your loader can result in dangerous situations and property damage.
- Only commence works after having received and studied the underground plans and information thoroughly. Never begin work until the work area has been fully marked for underground utilities.
- For more information about digging best practices access www.byda.com.au. Many countries offer a similar service which advises the location of underground services in your area. If available use this service prior to digging, drilling, trenching or any form of excavating and earthmoving.



CAUTION

You must ensure that underground utilities have been officially marked before working in the area. Markings must be valid according to state law or practice.

Exposure to Respirable Crystalline Silica Dust Along with Other Hazardous Dusts

- It is recommended to use dust suppression, dust collection, and if necessary personal protective equipment during the operation of this or any other machine attachment that may cause high levels of dust.

Safety Precautions - General Information

Remove Paint Before Welding or Heating

- Hazardous fumes/dust can be generated when paint is heated by welding, soldering, or using a torch. Do all work outside or in a well ventilated area and dispose of paint and solvent properly.
- Remove paint before welding or heating. When sanding or grinding paint, avoid breathing the dust. Wear an approved respirator. If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

End of Life Disposal

- At the completion of the useful life of the Planetary Drive unit, drain all fluids and dismantle by separating the different materials (rubber, steel, and plastic etc.). Follow all federal, state and local regulations for recycling and disposal of the fluid and components.

Operating the Planetary Drive

- The primary responsibility for safety with this equipment falls to the operator. Make sure that the equipment is operated only by trained individuals, who have read and understood this manual.
- An operator must not use drugs or alcohol, which can change his or her alertness or coordination. An operator taking prescription or over-the-counter drugs should seek medical advice on whether or not he or she can safely operate the equipment.
- Don't hurry the learning process or take the unit for granted.
- It is the skill, care, common sense, and good judgement of the operator that will determine how efficiently and safely the job is performed.
- Visually inspect your equipment, ensure correct assembly and installation is done and never operate the equipment that is not in proper working order.
- Know the capabilities of your equipment and practice its operation to become familiar with the controls, emergency shut down procedures, and the way it handles on your machine.
- Follow all safety decals and keep them clean. Replace them, If they become worn, damaged or illegible.

Safety Precautions - General Information

- Do not paint over, remove or deface any safety signs or warning decals on your equipment.
- Operate only from the operator's station and operate only in daylight or with sufficient artificial light.
- Always carry loads close to the ground and do not exit the machine with the loader arms raised.
- Do not exceed rated operating capacity (ROC) of the host machine, as machine may become unstable resulting in loss of control. Overloading or exceeding the manufacturers specifications will also void all warranty.
- Remove the Auger drive from the parent machine before transporting to and from the job site.
- Never use the attachment on a machine that is not equipped with a cab rollover protective structure (ROPS) and/or falling object protective structure (FOPS), and operator restraints (seat belts or equivalent devices). Although, this is not applicable when using this attachment on a stand-on mini loader.
- Establish and maintain a minimum 6 meters (20 feet) exclusion zone around the working area. No person other than the operator should enter the work zone, while the parent machine's engine is running.
- Do not allow site workers to climb or ride on the Planetary drive, Auger or Auger extension at any time, including while stationary, in operation or being moved.
- Avoid steep hillside operation which could cause the machine to overturn. Consult your machine operator's and safety manual for maximum allowable incline.
- Reduce speed when driving over rough terrain, on a slope or turning to avoid overturning the machine.
- Travel only with the planetary drive in a safe transport position to prevent the uncontrolled movement. Drive slowly over rough ground and on slopes.
- Tether any auger, anchor or extensions connected to the drive with a chain if necessary, to prevent uncontrolled swinging of the attachments.
- Drill stem rotation must be stopped before adding or removing sections, or making adjustments to the drill stem or sampling equipment.
- Augers shall be cleaned only when the rotating mechanism is in neutral and Auger is stopped. Long handled shovels shall be used to move cuttings from the Auger. Materials heavier than 10 kgs (22 lbs) must be moved mechanically or by two people.

Safety Precautions - General Information

- Do not drive close to ditches and excavations, etc., as cave in could result.
- Flow and pressure gauges, fittings, and hoses must have a continuous operating pressure rating of at least 25% higher than the highest pressures of the system.
- All drilling operations must be stopped in the event of local thunderstorm or lightning activity. During operation, weather conditions shall be monitored, operations shall cease during electrical storms or when electrical storms are imminent. Ground personnel and bystanders.



DANGER

During Auger Drive operation, maintain a minimum “no-work zone” buffer of 3 meters (10 feet) from any overhead electrical service and 2 meters (6 feet) from any underground service.

- Be alert to others in the work area. Be sure others know when and where you will be working.
- Loose fitting clothing, long hair, jewellery and equipment which might become entangled in moving equipment are prohibited while working near the Auger Drive.
- Operators, helpers, and other personnel working near the attachment must wear steel-toe safety shoes, safety glasses, and hard hats as a minimum. Hearing protection, respirators, and personal protective clothing will be specified in the site-specific Health and Safety Plan.



DANGER

All bystanders should be kept at a minimum of 6 meters (20 feet) away from the working area of the Auger drive.

Safety Precautions - General Information

Storing Your Planetary Drive Unit

- Seal hydraulic couplers from contaminants. Use the supplied dust covers on the quick couplers, or connect the couples together.
- Secure all hydraulic hoses off the ground to help prevent damage.
- Clean the unit thoroughly by removing all mud, dirt, and grease etc..
- Inspect for visible signs of wear, breakage, or damage. If required, order any damage parts and perform the necessary repairs to avoid delays upon removal from storage.
- Check that drive unit motor and hoses are full of clean oil and planetary gearbox is full.
- Coat liberally with grease the output shaft and collar, extension shaft and collar, and all connecting pins to prevent rust and reduce wear.
- Tighten loose nuts, cap screws, and hydraulic connections.
- Replace safety decals that are damaged or in an unreadable condition.
- Store unit in a dry and protected place, as leaving the unit outside will materially shorten its life.

Safety Precautions - General Information

Maintaining the Planetary Drive

- All maintenance should be performed with the engine turned off, parking brakes applied, machine arms lowered, and hydraulic pressure relieved.
- If lift arms must be left raised for any reason, use a positive lift arm lock to secure the arms in place. Serious damage or personal injury could result from lift arms accidentally lowering.
- Never adjust a relief valve for pressure higher than recommended by the machine's manufacturer.

Transporting the Planetary Drive

- When transporting your attachment, follow all local government regulations that may apply along with any equipment safety precautions provided in this manual.
- It is the responsibility of the operator that safe systems of work are employed while handling this attachment.
- No tie down points are provided on the attachment and it's the responsibility of the operator to ensure that the attachment is firmly fastened without causing any damage to it.
- Attachment should be well secured, when being moved or in transit and furthermore prior to moving, storing, loading/unloading, or parking.
- Verify that all tie down accessories (chains, slings, ropes, and shackles etc.) are capable of maintaining attachment stability during transporting and are attached in such a way to prevent unintended disengagement or shifting of the unit.
- Use extra care when loading or unloading the attachment on to a trailer or truck and disconnect hydraulic couplers during the transportation. No responsibility for loss or damage to persons or property in any regard can be attributed to Digga.

Safety - Working with the Attachment

Complete a Risk Assessment

Your Digga Planetary Drive is a versatile earthmoving machinery attachment, capable of performing its tasks in a safe and effective manner. To ensure the safety of operators and others, it is important to document the work at hand for hazard and risk. Before beginning work, complete a risk assessment. The following steps provide a framework for this activity:

1	DOCUMENT THE ACTIVITY Assemble those involved in the activity. Write down the tasks required for the activity in step-by-step form.
2	IDENTIFY THE HAZARDS Next to each task, identify what part of the task may cause injury to those engaged in the task or others in the vicinity. Rate the consequences and likelihood of the hazard using the risk assessment matrix.
3	DOCUMENT THE CONTROL MEASURES Using the results from the risk assessment matrix, determine which hazards require attention. List all mitigation measures that are required to eliminate or minimize those hazards.
4	IDENTIFY THE RESPONSIBLE PERSON Document the name of the person responsible for implementation of the mitigation measure.
5	MONITOR AND REVIEW Ensure that the activity is supervised and that the documented process is being followed.

NOTE

Remember, Personal Protection Equipment (PPE) provides a level of protection during work, but PPE is the last level of hazard control and prevention. Always refer to the hierarchy of hazard control, when planning a safety process.

Safety - Working with the Attachment

Take Extreme Care When Dealing with Hydraulics - Whilst Assembling, Operating, Maintaining or Performing any work on or near this product.

- Hydraulic fluid under pressure can penetrate the skin and may develop gangrene or other permanent disabilities. **Hydraulic leaks under pressure may not be visible!**
- If any fluid penetrates the skin, **get immediate medical attention!**
- Wear safety glasses, protective clothing, and use a sound piece of cardboard or wood when searching for hydraulic leaks. **Do not use your hands!**
- Before connecting or disconnecting hydraulic hoses, read your machine or power unit's operator manual for detailed instructions on connecting and disconnecting hydraulic attachments.
- Ensure that all parts meet the specifications for this product when installing or replacing hydraulic hoses or fittings.
- After connecting hydraulic lines:
 - Slowly and carefully raise the loader's arm(s) and cycle the rollback/dump cylinders to check hose clearances and to check for any interference.
 - Operate the hydraulics on this product to ascertain forward and reverse.
 - Ensure that the hoses cannot interfere with or actuate the quick-attach mechanism.
 - Ensure that hoses will not be pinched, or get tangled, in any equipment.
- Do not lock the auxiliary hydraulics of your Planetary Drive unit in the "ON" position.
- Refer to host machine operator's manual and this manual for procedures and service intervals, then inspect and maintain the entire hydraulic system to ensure that the fluid remains clean, that all devices function properly, and that there are no fluid leaks.

NOTE

For any additional safety information please see "Risk Management Booklet". To obtain a copy of this document please contact Digga Head Office.

Safety - Working with the Attachment

When Mounting this Product to Your Machine







- Refer to the operator's manual of your host machine for any special or detailed mounting instructions regarding quick-attach mechanism.
- This product should fit onto the quick-attach frame or hitch (machine mount). If this product does not fit properly, contact your Digga dealer before operating.
- Never place any part of your body into the mounting plate, frame, hitch or loader holes. A slight movement of the power unit and this product could cause serious injury.
- Where 'Dead Man' connections are connected or installed it is illegal to disengage, tamper with, or remove them.

When Adjusting Servicing or Repairing this Product





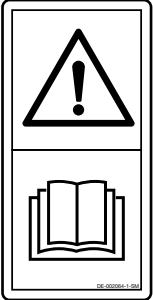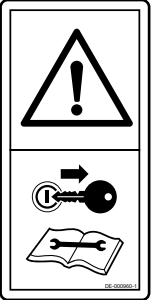

- Do not make any modifications to your Digga Planetary drive unit.
- When making repairs use competent service agents and use only genuine Digga parts for the gearbox. For fasteners, hydraulic hoses, or hydraulic fittings, use only properly rated parts.
- Replacement parts must also have safety signs attached.





Safety - Decal Labels

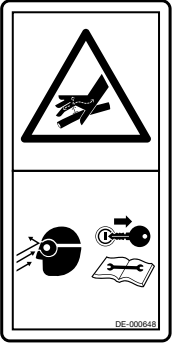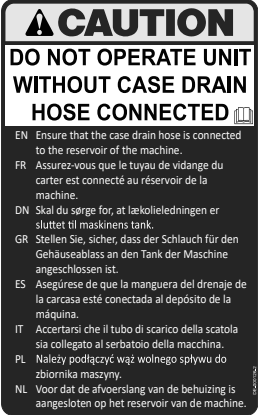The following section provides a glossary of safety labels found on your Digga Planetary drive unit. These labels are important! Become familiar with both their meaning and location prior to operating your drive unit. They must be maintained and ensure that each label is clean, visible, and legible. To clean the decal, use a soft cloth, water, and soap. Avoid the use of solvents, gasoline, or other harsh chemicals, as these may damage the decal. If a label has been damaged or removed, it must be replaced.

READ OPERATOR'S MANUAL	REMOVE IGNITION KEY	ENTANGLEMENT / CRUSH HAZARD
		
<p> DANGER</p> <p>Completely read and understand this operator's manual before using your attachment. Keep the manual with the attachment at all times.</p>	<p> CAUTION</p> <p>Before performing any maintenance on the Planetary drive or attachment, switch engine off and remove the key. Never leave the key in an unattended machine.</p>	<p> WARNING</p> <p>Keep hands and body parts clear of auger drive. Keep all bystanders at a safe distance (6 meters/20 feet) from operating auger drive and work zone. Refer to this operator's manual for more information.</p>

Safety - Decal Labels

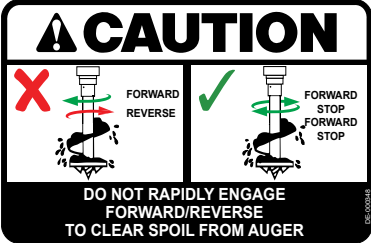
FLUID UNDER PRESSURE	CONNECT CASE DRAIN	DO NOT CHANGE SPEED WHILE SHAFT IS ROTATING
		
<p> DANGER</p> <p>Refer to page 23 about fluid injection hazard. Wear eye protection. Before performing any maintenance on the attachment, switch the hosting machine engine off and remove the key. Never leave the key in an unattended machine.</p>	<p> CAUTION</p> <p>Ensure that the case drain hose is connected to the reservoir of the machine and its flow is unrestricted. See page 26.</p>	<p> CAUTION</p> <p>Applicable to 2-speed drives. Stop the rotation before changing from low speed to high speed and vice-versa. See "2 Speed Installations-Electrics" on page 43.</p>

DO NOT RAPIDLY ENGAGE FORWARD AND REVERSE	DIAL BEFORE YOU DIG	MY.DIGGA.COM
	<p>Australia:</p>  <p>USA:</p> 	
<p>⚠ CAUTION</p> <p>Do not rapidly engage forward/reverse to clear spoil from the auger. Alternate between forward/stop instead. Reversing the rotation quickly can damage your drive unit.</p>	<p>⚠ CAUTION</p> <p>Dial before you Dig. Hidden services must be located.</p> <p>NOTE: This Decal varies according to the location. All other regions should have a similar service available.</p>	<p><u>NOTE</u></p> <p>Scan the QR code or type in any web browser my.digga.com to access manuals, risk assessments and further information about your equipment.</p>

Safety - Decal Locations


NOTE

The following figure and table show typical safety decal labels location for units marketed in Australia, New Zealand, USA, Europe and United Kingdom. The actual position and quantity of the labels on your product may differ.

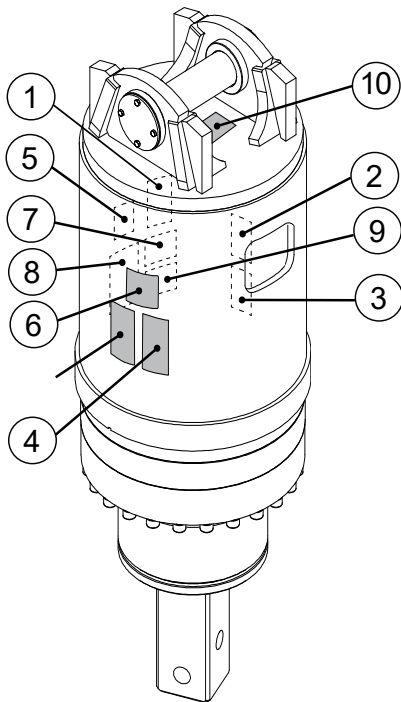

ITEM	RE-ORDER CODE	QTY
1	DE-002064-1	1
2	DE-000960-1	1
3	DE-000630-1	2
4	DE-000648	1
5	DE-000046 (AUS/NZ)*	1
	DE-002267 (USA)*	
6	DE-000850	1
7	DE-000368-1	1
8	DE-000126-2	1
9	DE-000348	1
10	DE-000631 (AUS & NZ)*	1
	DE-000632 (AUS & NZ)*	
	DE-000626 (EU & UK)*	
	DE-000627 (EU & UK)*	
	DE-000628 (USA)*	
	DE-000629 (USA)*	



*Item 10 (serial tag) is location specific.
Refer page 7 for serial tag identification

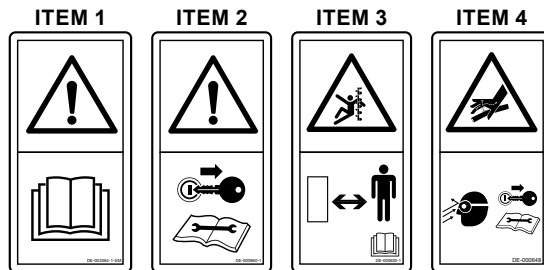

*ITEM 5



ITEM 6

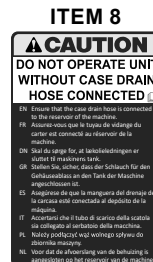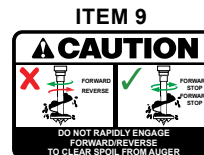


The key feature of your Digga Planetary drive is low maintenance, regular oil changes only are required. It contains no user serviceable parts, unauthorised disassembly will void warranty. **Written permission from Digga must be obtained before performing any disassembly.**

Before First Use

Inspect the drive unit for shipping damage. If damage does exist, do not operate until the damaged parts have been replaced or repaired.

Before Each Use

- Make sure that all nuts and bolts are in place and properly tightened.
- Make sure that all other fasteners are in place and are performing their specified function.
- Make sure that all hydraulic fittings are tightened and that there are no leaks in any fittings or hoses.
- Make sure that all safety signs are in place, are clean, and are legible (see the safety sign section).
- Check for any oil leaks, wear and tear on pins, linkages, clips, bushes and hood.
- Ensure any damage or excessively worn parts are replaced.
- Always wear safety goggles or glasses when inspecting equipment.

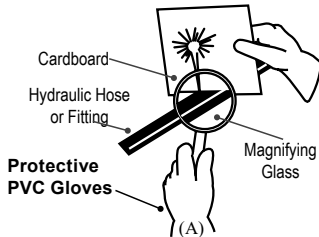

WARNING

Escaping fluid under pressure as low as 100 PSI can have sufficient force to penetrate the skin up to 4" (100mm) away causing serious personal injury. Fluid escaping from a very small hole can be almost invisible. Use a piece of cardboard or wood, rather than hands to search for suspected leaks (A). Keep unprotected body parts, such as face, eyes, and arms as far away as possible from a suspected leak and use heavy duty PVC protective gloves. Flesh injected with hydraulic fluid may develop gangrene or other permanent disabilities.

Before Use



WARNING


Always wear the correct PPE, when operating or performing maintenance on this attachment. If a hydraulic fluid injection injury occurs, seek emergency medical attention immediately. Explain to medical staff that the injury is the result of pressurised fluid injection. Remember even if the point of entry appears as a minor pin hole, this potentially could be a major injury, especially if not treated in time.

Operating Parameters - HP (KW) Power Ratings

The hydraulic motor of your Planetary drive unit has a maximum power rating. Maximum Pressure & Flow cannot be achieved at the same time. Ensure you know and understand the maximum flow, pressure and power ratings of your drive unit and parent machine. Never exceed the maximum ratings listed on the serial tag attached to the top of the hood.

Commissioning Procedure

All Digga Planetary drive units are despatched from the factory full of fluids (hydraulic and gearbox oil) unless a warning decal is attached. The decal is only applied in special circumstances, for example if a drive unit needs to be air-freighted to the customer. Air transportation regulation prohibits certain fluids from being air-freighted. If there are no fluids in the drive unit at the time of despatching, then the decal **DE-000127** will be applied to the drive unit.

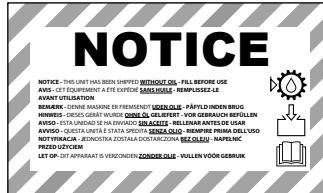

Part Number: DE-000127

- Once you have determined if the drive unit has gearbox oil in or requires oil, ensure that the correct grade and quantity of oil is used. **Do not run the drive unit without gearbox oil.** Connect the hydraulic hoses and if required, optional 2 Speed electrical harness to the machine. If the customer has ordered the optional Pressure differential kit and the Diggalign kit, then there will be 2 additional electrical harnesses to connect.
- All models covered by this manual require to connect a case drain line. The case drain hose is already fitted to the hydraulic motor and needs to run all the way to the hydraulic reservoir of the host machine. The case drain line is connected to the hydraulic motor and coiled up inside the hood. Do not use quick couplers or inline fittings on the case drain line.

Commissioning Procedure

WARNING


Before the drive unit is even connected to the machine ensure that it is full of hydraulic oil and the gearbox is full of gear oil. For details, see the Maintenance section of this manual.


All SD, MD, UD and XD planetary gear drive units use **Castrol Alphasyn EP320 (syntetic) gearbox oil for operating in tropical ambient temperatures**. See maintenance section of this manual for gearbox oil volume, gearbox oil volume checking as well as the gearbox oil recommended for cold climate conditions. The gearbox oil quantity is also engraved on the serial tag located between the ears of the hood.

To ensure best motor life, run motor for approximate one hour at 30% of rated pressure before application to full load. Be sure that motor and gearbox are full of fluids prior to any load application. When procuring any hose assemblies for use on your Digga Planetary drive unit ensure that the maximum operating pressure of the hoses is always 25% higher than what the excavator or machine can produce (which the planetary drive unit will be used on).

NOTE

Ensure that the case drain hose is connected to the reservoir of the machine. It is important that the pressure in the case drain hose is not reading more than 690kPa (100psi), whilst operating and that a consistent trickle of hydraulic oil is being returned to the excavator reservoir. Intermittent and spurts of flow from the case drain hose are not standard design symptoms. If this occurs, please consult a Digga Dealer or Digga Head Office.

 CAUTION

**DO NOT OPERATE UNIT
WITHOUT CASE DRAIN
HOSE CONNECTED **

EN Ensure that the case drain hose is connected to the reservoir of the machine.

FR Assurez-vous que le tuyau de vidange du carter est connecté au réservoir de la machine.

DN Skål du sørge for, at lækoleledningen er sluttet til maskinens tank.

GR Stellen Sie sicher, dass der Schlauch für den Gehäuseablass an den Tank der Maschine angeschlossen ist.

ES Asegúrese de que la manguera del drenaje de la carcasa esté conectada al depósito de la máquina.

IT Accertarsi che il tubo di scarico della scatola sia collegato al serbatoio della macchina.


PL Należy podłączyć wąż wolnego spływu do zbiornika maszyn.

NL Voor dat de afvoerslang van de behuizing is aangesloten op het reservoir van de machine.

Part Number: DE-000126-2

Hydraulic motor general arrangement


SAI GD-4

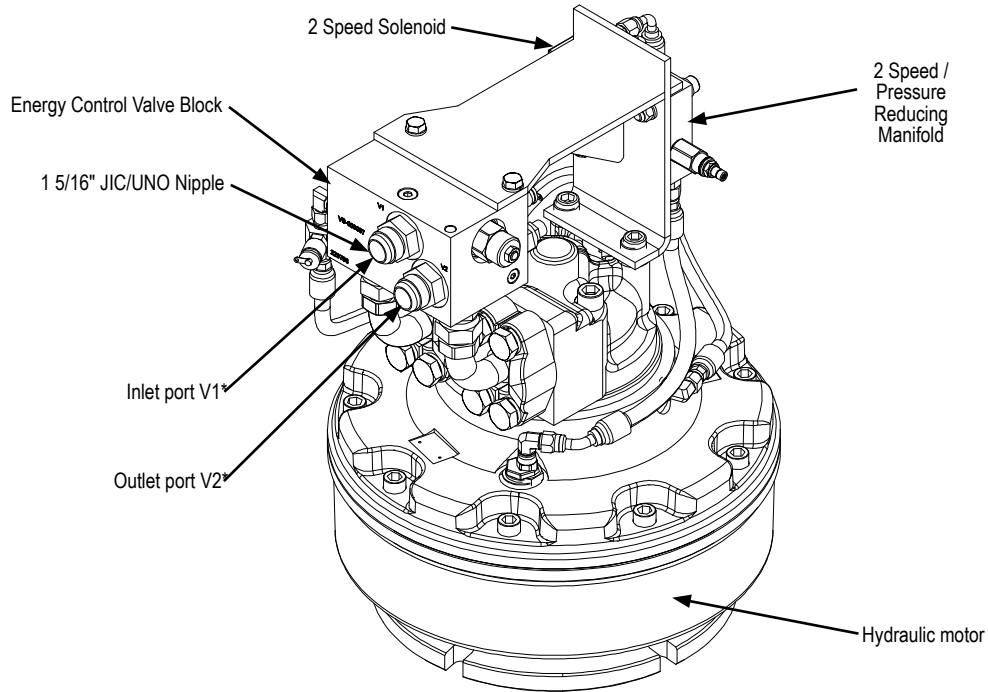

*Clockwise rotation of the output shaft (viewed from the top of the motor). Swap ports to revert rotation.

Hydraulic motor general arrangement


SAI TD3.5

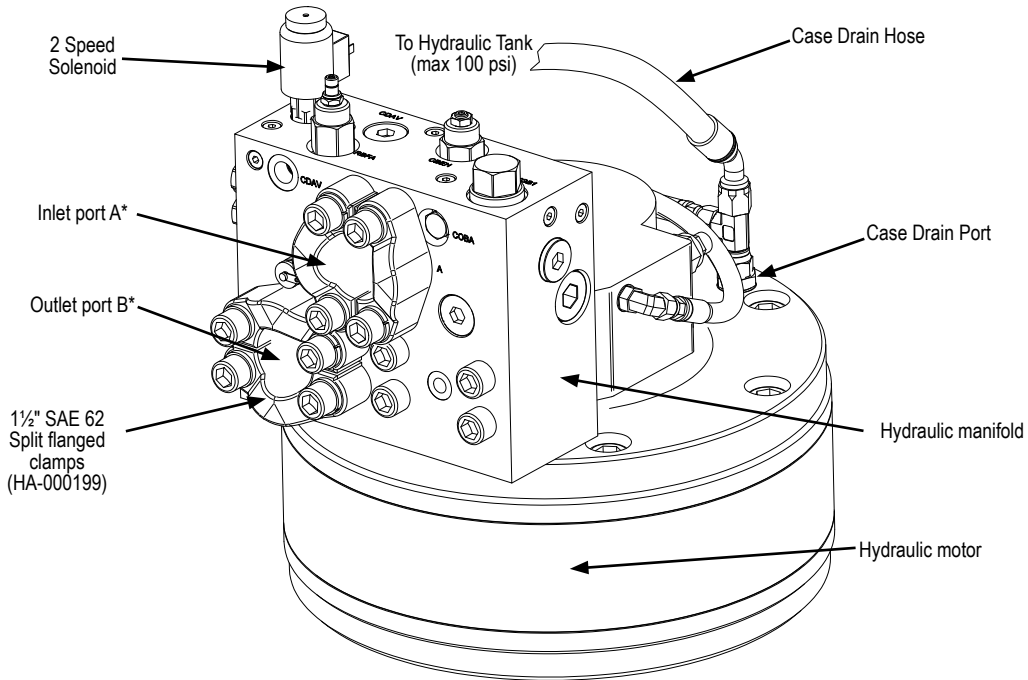

*Clockwise rotation of the output shaft (viewed from the top of the motor). Swap ports to revert rotation.

Hydraulic motor general arrangement


SAI TF3.5

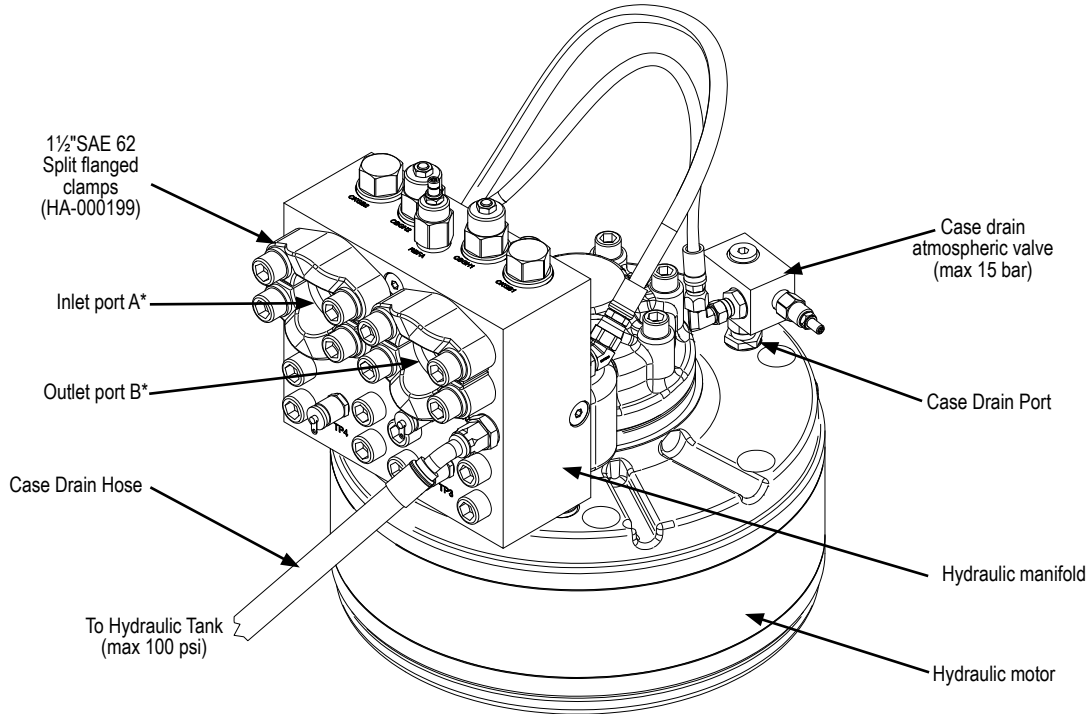

*Clockwise rotation of the output shaft (viewed from the top of the motor). Swap ports to revert rotation.

Hydraulic motor general arrangement

SAI TF2.5

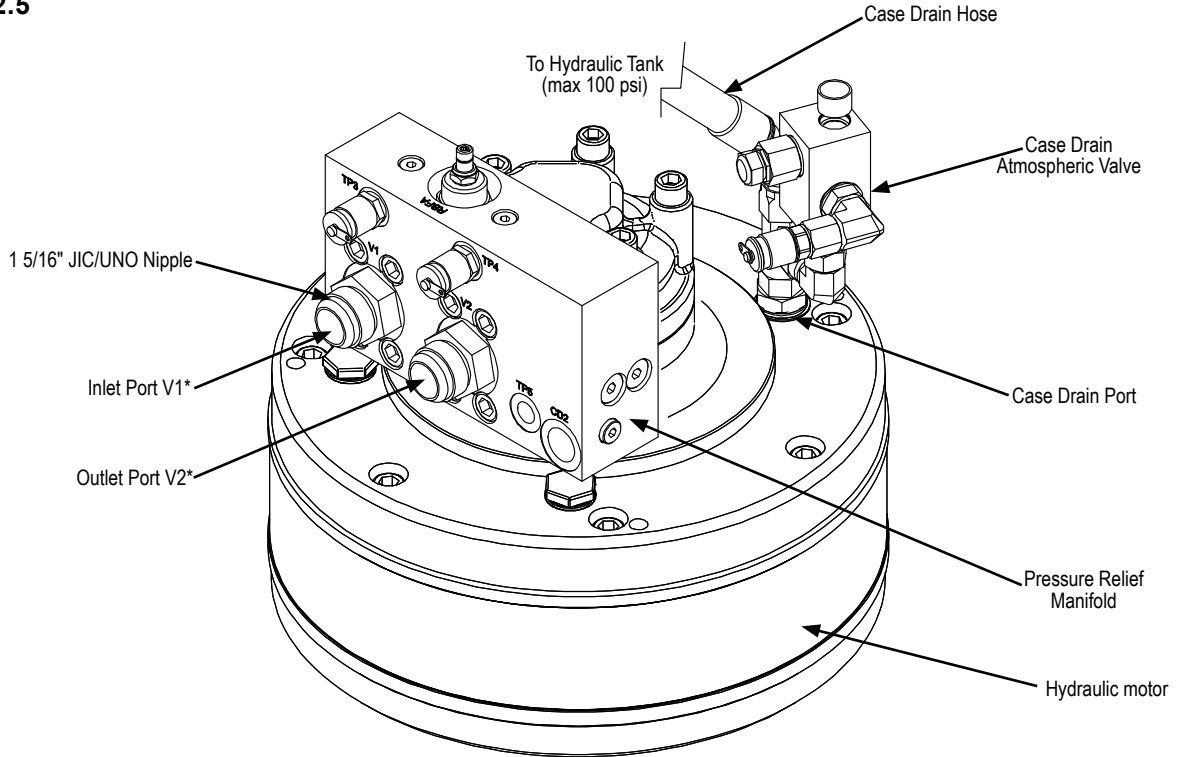

*Clockwise rotation of the output shaft (viewed from the top of the motor). Swap ports to revert rotation.

Hydraulic motors specifications

HYDRAULIC MOTOR SPECIFICATIONS						
	GM2	GM4	GD4	TD3.5	TF3.5	TF2.5
Continuous pressure (bar)	250	250	400	400	400	400
Peak pressure (bar)	350	350	375	450	450	450
Maximum casing continuous pressure (bar)	1	1	1	5	5	5
Maximum casing peak pressure (bar)	5	5	5	15	10	15
Relief valve pressure setting (bar)*	242	242	242	345	345	345
Peak power (kW)	59	100	130	220	220	140
Approximated weight (Kg)	51	100	166	120	120	86
Motor oil capacity (l)	2	6.5	6.5	3.5	4	3.5

***All High Power Planetary drive units have their pressure relief set to 345 bar (5000 psi).**

Please refer serial tags for maximum flow and pressure ratings, if exceeded warranty will be voided.

Commissioning Procedure

Installing your Planetary drive

- Remove the shipping banding from around the attachment.
- Ensure you have read the serial tag on the drive unit to obtain the maximum flow and pressure ratings, and your machine flow and pressure settings are aligned with the requirements of the drive unit. **Never exceed the maximum flow and pressure ratings as warranty will be voided.**
- Follow all standard safety practices and the instructions for installing an attachment as shown in your machine operator's manual.
- Lower the unit to the ground and remove any attachments from the front of the host machine.
- Attach the quick attach mounting frame or hitch to the host machine as per the machine manufacturers specifications. Ensure the locking mechanisms on the machine are engaged & the attachment is secure.
- Relieve any pressure from the auxiliary hydraulic system and after making sure there is no foreign matter on the hydraulic couplers, connect the power and return couplers to the auxiliary hydraulic system of your machine. The list below shows the most common places to “tap” into the hydraulic system on various types of machines.
 - Backhoes & Excavators - Auxiliary hydraulic outlets or bucket curl cylinder circuit.
 - Wheel Loaders - Auxiliary hydraulic outlets or bucket tilt (dump) cylinder circuit.
- Route the hoses in such a fashion as to avoid pinching or chafing. Be sure the two hydraulic hoses are long enough to perform at the full range of the auger drives operating motion.
- Hydraulic Motor valve blocks may have SAE code 62 flange ports or BSP 1" depending on the model of drive unit. If the Hydraulic motor uses SAE code 62 flange port, it may have 3/4" or 1.5" flange hole size (this depends on the model of drive unit and Hydraulic motor fitted). We recommend that high pressure hoses A & B should be custom made and fitted by a Qualified Hose Assembler/ Fitter. We also recommend the use of hoses rated to 350 bar(5000 psi) working pressure. Hose size is determined by the machine's flow rate and should be calculated by the Qualified Hose Assembler/Fitter. Hoses A & B are normally connected to the auxiliary lines on the parent machine.

Commissioning Procedure

- Always connect the case drain coupler to the case drain on your machine. If your machine has a case tap, ensure the case tap is open. Failure to connect the case drain will severely damage the motor and void all warranty. Case drain hose is already fitted to the units hydraulic motor and must be unravelled. This case drain hose must return directly to hydraulic oil reservoir on the parent machine. There can be no valving or restrictions in the line and the hose inner diameter must be minimum 1/2" (12.7 mm). The loose end of this case drain line must have a fitting fitted to match the fitting on the parent machine.
- **Variable foot control** - It is recommended that excavators used to power drive units have their auxiliary circuit controlled with a variable foot control. This foot control gives the operator the ability to ease the power on and off avoiding shock loading, which will cause potential expensive damage to the hydraulic motor and gearbox.
- **Filtration/Contamination** - These units are fitted with a piston hydraulic motor which requires a filtration of 10 micron to both A & B pressure hoses. Ensure hoses are clear of any contamination during connecting/disconnecting to prevent contaminants entering the hydraulic motor. We recommend these filters be permanently fitted to the drive unit so any contamination entering the system while connecting or disconnecting hoses is caught before entering the hydraulic motor.
- With the unit lying horizontally on the ground connect the auger, screw anchor or extension or core barrel. Ensure the auger and safety clip are installed correctly. The machine is now ready for use.
- If augering, check the auger teeth and pilots are not worn.
- Ensure all worn parts are replaced. Worn parts will become ineffective and severely diminish the overall performance of the Planetary drive and Auger.

Commissioning Procedure

NOTE

Ensure that the locking mechanism on your quick attach is engaged, therefore locking the attachment onto the machine. If there is any portion of this manual that you do not understand, contact your Digga dealer or Digga Head Office. Altering, tampering or dismantling any part of the Digga drive unit without written permission from Digga will void any warranty.



WARNING

Ensure that there are no quick release couplers and/or the T-connectors in the case drain line as it might restrict the case drain flow. Operation with an obstructed case drain line will cause motor failure.

Cold Weather Startup Information

The information that is contained on this page is an aid to the operation and maintenance of your Digga planetary drive unit in cold weather. When you operate the host machine in temperatures from 9°C (48°F) to -40°C (-40°F) refer to the operation and maintenance manual of your machine. It is difficult to outline the operation and maintenance of a machine that is used in freezing temperatures for a general publication. The difficulty in outlining the requirements is caused by the following conditions:

- The unlimited differences in weather conditions
- Applications and ground conditions
- Supplies that are available in your area

In order to provide the best possible guidelines, use the information provided in this manual and other criteria such as: varying factors, recommendations from your machinery dealer, and past proven practices.

Hints for Cold Weather

Make sure that you read the information for selecting the correct oils for use in cold weather. For details refer to the Maintenance section of this manual. Prepare the machine for the weather conditions as instructed in your machines operator's manual.

Procedure for Startup in Cold Weather

- Your Digga Planetary drive unit is designed to operate within ambient temperatures of 5°C (41°F) and 30°C (86°F).
- For temperatures below 5°C (41°F) it is recommended to slowly start the drive under no load, at minimum speed. This will allow warm hydraulic oil from your host machine to circulate through the hydraulic motor of your drive and slowly bring it to the minimum recommended operating temperature. Once the minimum temperature has been achieved it is recommended to slowly introduce load to the output of the drive unit, which in turn will increase the internal gear oil temperature.

Operating Instructions

NOTE

The host machines cooling system and the lubrication system for the engine do not lose heat immediately upon shutdown. The transmission and the hydraulic system lose heat more rapidly because of more exposed areas. The Planetary gearbox & motor cases cool rapidly, since the cases do not operate as warm as other compartments. Therefore, after any period of down time on the machine, ensure you achieve full operating temperatures through following start up instructions. Thick oil can also cause high case pressures which in turn cause shaft seal problems.

Auger Installation

- Ensure the selected auger hub is compatible with your planetary drive shaft. Remove any pins from either the drive shaft or the auger.
- Position the auger in a way that allows your machine to align the drive shaft with the auger hub. Use mechanical assistance or teamwork if the load exceeds 55 lbs (25 kg). Consider using cradles to secure the auger vertically. See "Complete a Risk Assessment" on page 16.
- Insert the planetary drive into the auger hub, ensuring hole alignment (Fig 1).
- Insert the pin through the auger hub and drive shaft, then secure it in place with the lynch pin (Fig 2).
- Release the auger from its cradle (if applicable), lift it, and commence the work.

Fig.1


 


Fig.2

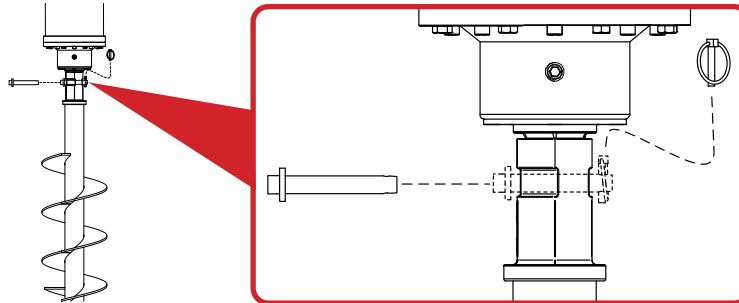

Operating Instructions

Operating Procedure - AUGERING

- This unit is designed for drilling vertical or horizontal holes or rotating piers into the ground. Use in any other way is considered contrary to the intended use. After all installation instructions have been completed, safety information read and understood, and the rest of this operator's manual has been reviewed, your Digga Auger Drive is now ready for use.
- With the auger raised off the ground and the host machine's engine set at a low RPM, activate the host machine's drive control valve to determine which position the control valve lever must be in to turn auger in a forward (clockwise) rotation. This is the "digging" position.
- Before beginning to dig, experiment with auger speed to determine a suitable auger RPM. Generally in light and sandy soil a high RPM is desirable. In hard, rocky, or frozen soils a slower RPM is desirable. To increase auger RPM, increase host machine's engine RPM. To decrease auger RPM, decrease host machine's engine RPM.
- Raise the Auger Drive so the auger hangs vertical and the drive is clear of the cradle, then lower the auger into the starting position. Ensure the crowd on your machine is forward and not back. This will keep the drive unit clear of the cradle and allow the auger to move freely from side to side and forward and back. The pendulum action must not be hindered otherwise damage / bending of the shaft or auger may occur. Lower the auger into the ground ensuring the auger drive does not stall and remains in a vertical position, start rotation of the auger.
- As the auger starts to load up with spoil, stop the rotation whilst still in the hole and raise the auger vertically. Move away from the hole, rotate the auger & stop, rotate the auger & stop in the forward direction to remove the spoil. **Do not rapidly engage forward/reverse action to remove spoil.**
- Do not remove the auger on an angle out of the hole, as you will run the increased risk of bending the auger or shaft.
- If trying to remove the auger full of material and you experience strong resistance, reverse the auger slowly whilst raising the auger vertically to assist with removal. Do not pull with the machine as you may run the risk of shaft damage to the drive.

Operating Instructions

- Do not flick the dirt (especially mud or clay) from the auger, as you may run the increased risk of bending the auger shaft.
- Keep clearing the auger hole regularly as you drill deeper. This will help prolong the life of the auger and the wear parts. In rocks it is recommended to add a slow stream of water to help the performance and life of the rock teeth.



CAUTION

Your Digga Planetary drive is specifically designed for drilling and rotational operation only, it is not a lifting device!



CAUTION

Do not rapidly engage forward reverse operation to remove soil from the Auger, this creates excessive pressure spikes which will adversely effect performance and longevity of the motor.

For Excavators

Apply the greatest amount of down force from the main boom. Be aware that the boom moves in an arc and to maintain a plumb drilling position. You will need to compensate for this movement by adjusting the dipper arm or moving your machine backwards or forwards to ensure you are drilling straight. You must take extreme care when doing this to prevent the auger or screw pile from bending or pulling flights against the inside of the hole.

For All Other Machines

Ensure the vertical position is maintained when drilling.

Operating Instructions

Operating Procedure - EXTENSIONS & TELESCOPIC AUGER EXTENSIONS

- Once you have obtained the maximum depth with the extension & auger you have, raise the auger out of the hole & clear the spoil from the auger. Place the auger back into the hole ensuring the auger is bottomed out in the hole & the hub of the extension is clear & easily accessible. Remove the auger pin to disengage the drive unit from the auger.



CAUTION



Ensure personal safety at all times, determine if access to the auger hub, once the auger is in the hole, is safe, if not safe for persons assisting, place boards or covers across the hole before attempting to reach across to the hub.

- Install the additional extension onto the auger drive with pin & safety clip, lower the extension & attach to the auger with second pin & safety clip. Always ensure persons assisting are clear & visible to the operator at all times.
- Recommence drilling, once you have reached the maximum depth, raise the auger and extension out of the hole until the eyelets of the extension are visible & just above the hole. Slide the two support bars through the two heavy duty eyelets or U-brackets welded to the outer extension. Either then remove the pin & section of extension and place away from the hole. Then re-pin back to the bottom section, take the weight of the rest of the extension & auger on the machine & remove the support bars. Clear the auger & then keep repeating these steps.
- For telescopic extensions, use the same method as above, but slide the inner extension back into the auger & pin.

NOTE

Digga does not accept any liability for injury or damage resulting from the operator using the extension(s) outside the designed operating procedure.

Operating Procedure - SCREW ANCHORING (PILE/PIER)

- Installation is to be performed by a trained and/or certified installer.
- Connect the manufacturer's approved adapters to the Planetary drive head. If you have two speed operation, start installation in the high speed , low torque setting and start installing pile. As the pressure builds and the torque increases, change the two speed controller to low speed , high torque and complete the pile installation to your required depth and torque. If your drive is single speed install the pile in one continuous motion until the desired depth and torque is achieved.
- Install pile/pier with a continuous motion. The rate should match the pitch on the pile. Make sure to apply just enough downward pressure to help the advancement of the pile into the ground, but not to much that you are driving or drilling the pile into the ground. Always maintain a plumb line to avoid bending the pile.

ECV - Energy Control Valve (Patented)

ECVs are fitted as an optional to all Digga High-Torque Planetary Drive Units. During the screw anchoring process energy builds up in the pile/pier, when the operator stops installation as torque is reached, the pile/pier temporarily 'flicks' back or rotates back forcing energy up the pile/pier, back up through the gear sets and into the motor, momentarily turning the motor into a pump. The ECV is designed to protect the motor from this action and essentially grabs the oil and gently bleeds it back down the hydraulic lines. The sound it makes is a gentle 'swoosh', this is how you know the valve is working. Inefficiencies occur with machinery that can reduce the torque output, such as heat, cold, age of machine etc.. It is therefore highly recommended that Torque monitoring equipment to keep record of the torque and pressure is installed. Contact Digga Head Office or your local Digga Dealer for further information regarding torque monitoring options.



NOTE

It is the responsibility of the installer to correctly calculate, plan and execute the installation of the piers to the nominated required torques. Digga does not accept any liability or consequential loss that is incurred from incorrect installation, over torquing or under torquing of piles.

Operating Instructions



Optional Extra - RYNO HITCH

If you have purchased a Ryno Hitch please ensure you read and understand the following operational procedures.

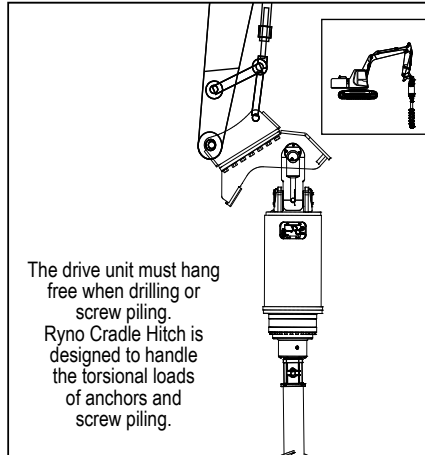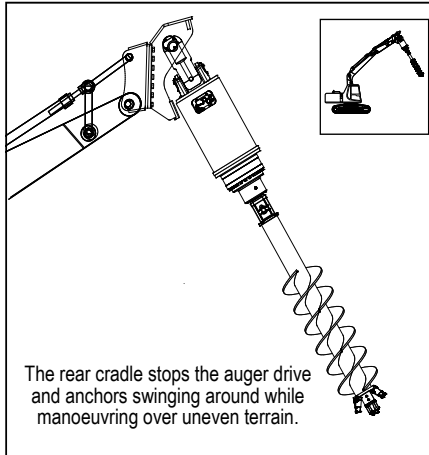



Avoid Pile Installation When Hitch is Fully Up.

  Avoid Pile Installation When Hitch is Fully Down.



PILE LOADING

During pile loading, make sure that the linkage is in line with the pile before starting the crowding or lifting action. Failure to do so may lead to damage.

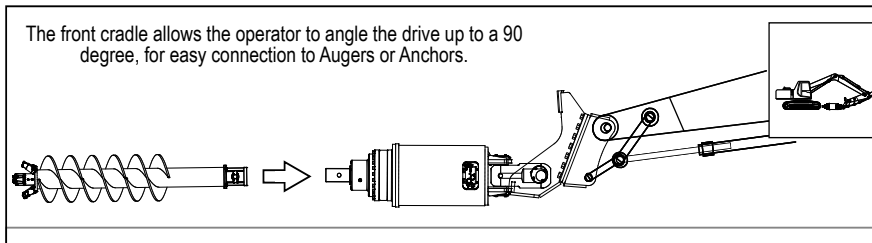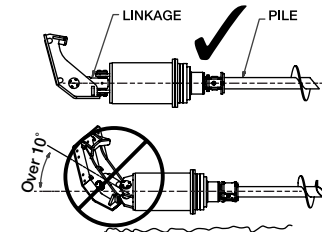


2 Speed Installations-Electrics

2 Speed Drives

The 2 Speed drive can be supplied in either a 12V or 24V system as per customer request. There are 2 ways to electrically power the drive unit.


(i) Hard wire from the machine battery

12 Volt Excavator connection diagram to 12V 2 Speed Drive Unit

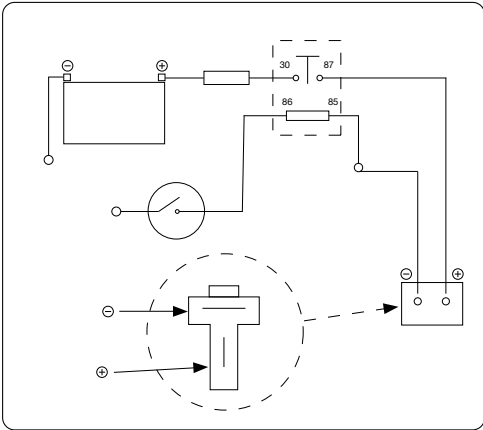

- Connect pin 30 of relay via 10 Amp fuse to battery positive terminal.
- Connect pin 86 of relay to an ignition source.
- Connect pin 85 of relay to chassis ground or battery ground terminal.
- Connect pin 87 of relay to two pin plug to connect to 2 Speed controller harness (this connection point is tagged 'supply').
- Connect an earth to the two pin plug to connect to 2 Speed controller harness.

24 Volt Excavator connection diagram to 24V 2 Speed Drive Unit

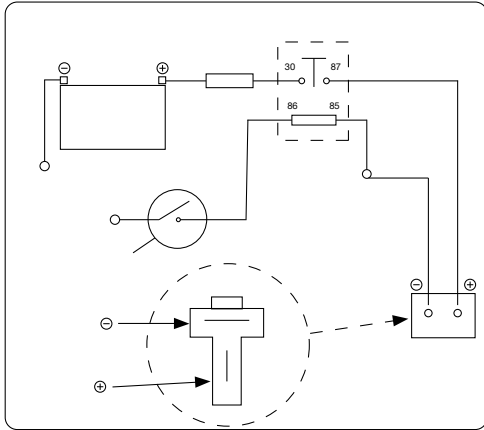


- Connect pin 30 of relay via 10 Amp fuse to battery.
- Connect pin 86 of relay to an ignition source.
- Connect pin 85 of relay to an earth point or earth of battery.
- Connect pin 87 of relay to positive terminal of the 2 pin plug.
- Connect an earth to the two pin plug to connect to the 2 Speed controller harness.

2 Speed Installations-Electrics

(ii) Use of Cigarette Lighter power lead

Power lead (B) TC- 000012 comes in as included in Digga's optional Plug and Go 2 Speed Controller Kit. This kit is recommended for telehandlers, backhoes and excavators as well as skid steer loaders (without a service plug). 4 kits are available with 4 different length extension harnesses.

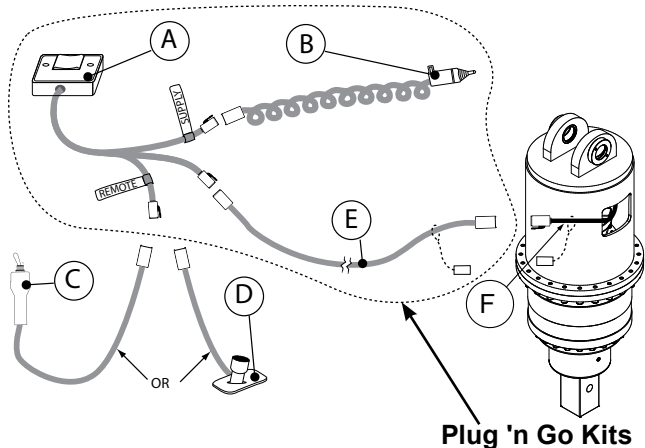

- If the Planetary drive unit is fitted with 24V Solenoid coil, plug the cigarette lighter plug into 24V DC Socket.
- If the Planetary drive unit is fitted with a 12V solenoid coil, plug the cigarette lighter plug into 12V DC socket.
- Do not connect A 12V powered drive unit to a 24V supply.

ITEM	DESCRIPTION
A	Controller 2 Speed
B	12V/24V Power Lead
C	Remote Toggle Switch (OPTIONAL)
D	Remote Floor Mounted Switch (OPTIONAL)
E	Extension Harness - Choose length
F	3m (10ft) Harness - Standard with 2 Speed Drive

KIT PART NUMBER	BOOM EXTENSION HARNESS LENGTH	TO SUIT MACHINE (SUGGESTED)
DM-000037	3M (10FT)	UP TO 5T EXCAVATORS
DM-000034	6M (20FT)	5T TO 8T EXCAVATORS & SKID STEER LOADERS
DM-000038	12M (40FT)	8T TO 16T EXCAVATORS
DM-000039	15M (50FT)	18T + EXCAVATORS

2 Speed Installations-Electrics

Connecting the Optional 2 Speed Harness Kit to an Excavator, Telehandler or Backhoe

The drive unit is connected to the 2 Speed controller (mounted in the Cab) via an extension harness. This harness contours the hydraulic hoses on the boom of an excavator. The extension harnesses are available in 3m (10'), 6m (20'), 12m (40') or 15m (50') length. The boom harness can be attached to the hydraulic lines of the excavator using cable ties (see illustration on the following page).

The optional Electrical harness kit comprises the following parts:

- 1x Extension harness, which is available in 4 different lengths depending on the machine size. These lengths are; 3m (10'), 6m (20'), 12m (40'), and 15m (50').
- 1x 2 Speed controller part number **DM-000013**. This controller has a 1.5m (5') long harness terminated with a 4 pin female Deutsch plug.
- 1x12V/24V power lead part number **TC-000012**.

The controller plugs into the extension harness and the extension harness plugs into the **Deutsch plug** on the motor harness. The motor harness part number **DM-000021** is connected inside the hood to the hydraulic motor (at the factory). On the harness of the 2 Speed controller and approximately 70mm (3") from the Deutsch Plug are two leads with a 2-pin plug on each lead. The male plug is tagged showing "SUPPLY 12V/24V" and is the main point where power is supplied to the 2 Speed system. The other plastic 2-pin plug is a female plug that is tagged "**Remote**". It is this plug that an optional 2 Speed joystick mounted toggle switch part number **DM-000026** or Floor mounted dipswitch part number **DM-000030** can be plugged into (see illustration on the following page).

Operation of the 2 Speed

- The 2-Speed drive unit is manufactured in SD, MD, UD & XD Drive options.
- The speed controller (mounted in the excavator cab) is a 2 Speed unit. This allows the operator to select the optimum speed required for drilling, core barrelling or applying screw pylons into the terrain.
- **HIGH Speed** is Low Torque - **LOW Speed** is High Torque (see the torque chart supplied with your drive unit to read, output RPM and corresponding torque at an applied hydraulic pressure).

2 Speed Installations-Electrics

2 Speed Electrical Layout for SD, MD, UD & XD Drive Units

ALL PURCHASED SD, MD, UD & XD DRIVES INCLUDE


- 3m (10ft) motor harness from drive unit (DM-000021)
- 15m (50ft) boom extension harness (DM-000022)
- In cab controller (DM-000013)
- 12V / 24V power lead (TC-000012)

*Additional boom extension harnesses sold separately (1)

*Joystick controls and foot controls sold separately (2)

(1) ADDITIONAL BOOM EXTENSION HARNESS (IF REQUIRED)

LENGTH	PART NUMBER	TO SUIT MACHINE (SUGGESTED)
3M (10FT)	DM-000025	UP TO 5T EXCAVATORS
6M (20FT)	DM-000024	5T TO 8T EXCAVATORS
12M (40FT)	DM-000023	8T TO 16T EXCAVATORS
15M (50FT)	DM-000022	18T + EXCAVATORS


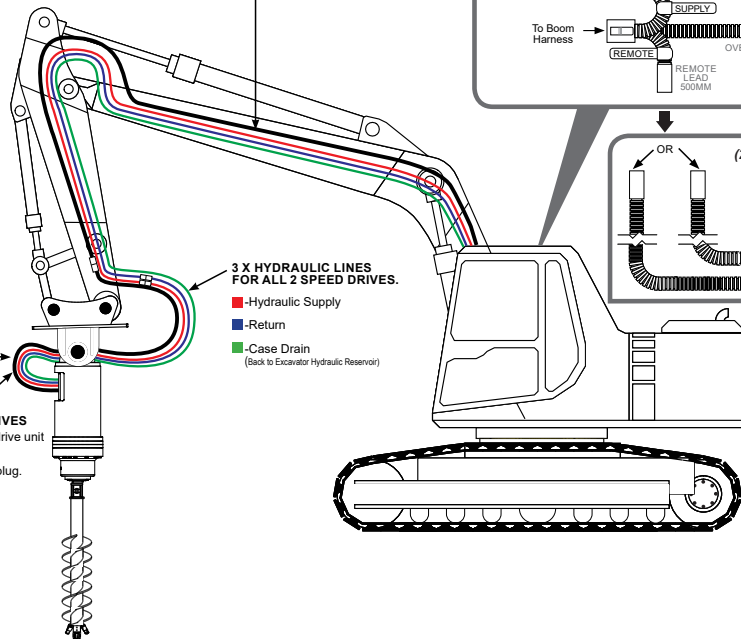


3 X HYDRAULIC LINES FOR ALL 2 SPEED DRIVES.

- -Hydraulic Supply
- -Return
- -Case Drain (Back to Excavator Hydraulic Reservoir)

ALL SD, MD, UD & XD 2-SPEED DRIVES

- Electrical harness factory installed in drive unit at time of order.
- 3m (10ft) harness with 2 pin Deutsch plug.
- Re-order Part Number (DM-000021)

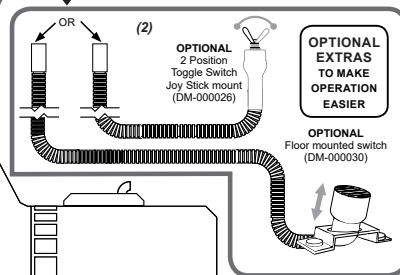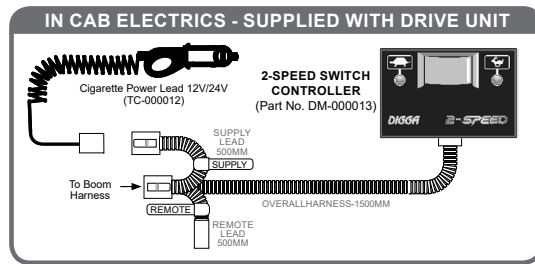


2 Speed Installations-Electrics

Electrical and Hydraulic Schematic Drawings

Below is a copy of the motor harness part number **DM-000021** used on 2 Speed drive units.


NOTE

No electrical harnesses or speed controllers are used on single speed Planetary drive units.

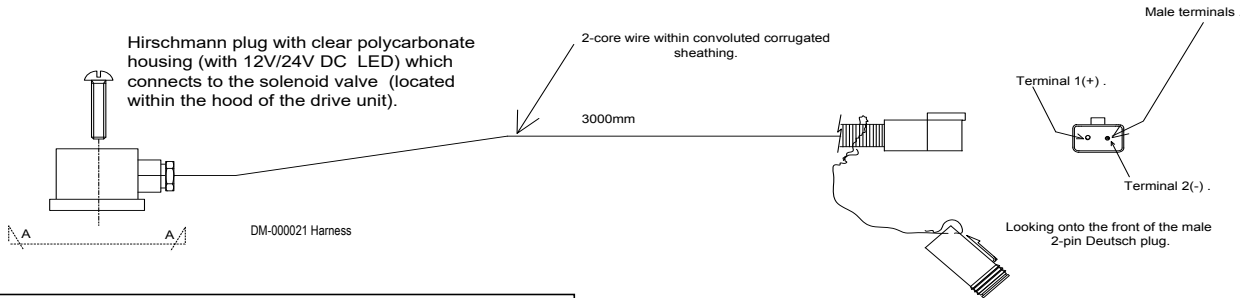

Note:


On the Hirschmann plug, the two points 1 and 2 are terminated. Terminal 1 is red and is positive(+). Terminal 2 is to be black and is negative(-). Note the orientation of the terminal block.

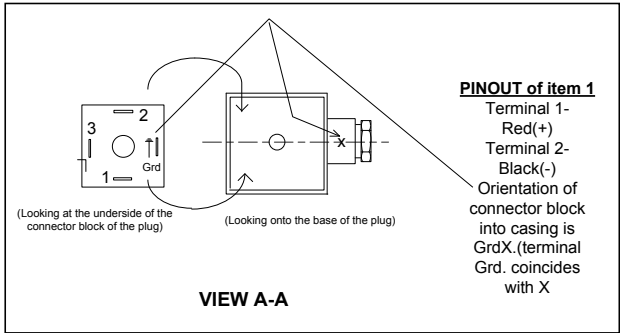

New Hirschmann plug in use, from June 2022. The clear plug contains an LED to visually indicate, power is on.


2 Speed Installations-Electrics

Below are the layout and schematic drawings of the Speed Controller part number **DM-000013** used on 2 Speed drive units.

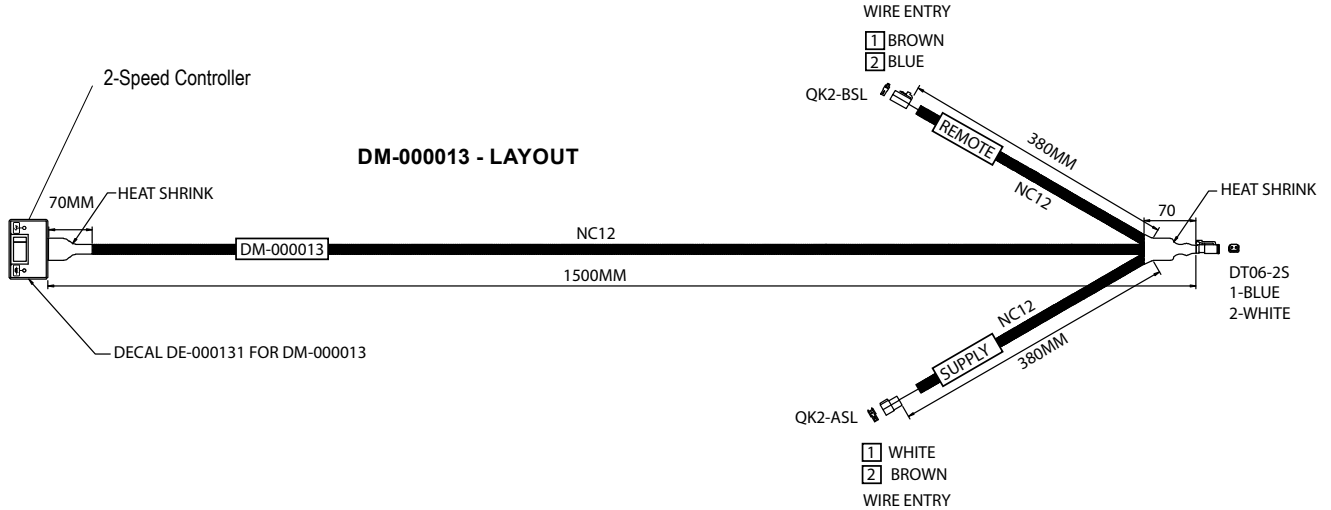

2 Speed Installations-Electrics


DM-000013 - Schematic

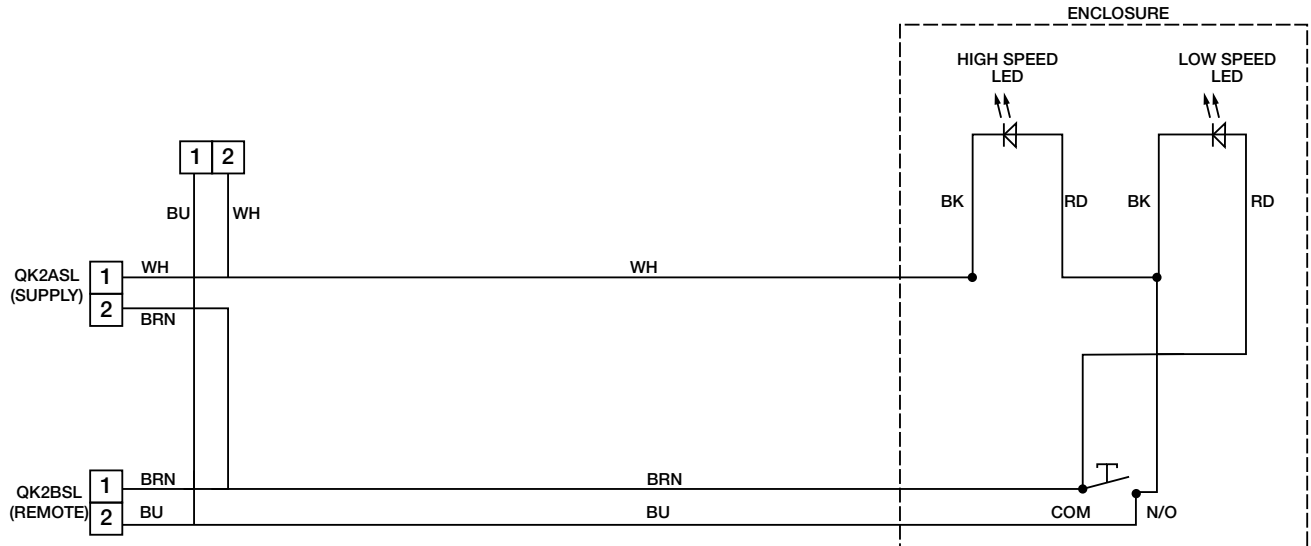

2 Speed Operating Instructions

Digga 2 Speed Controller (For 2 Speed Drive Unit)

1. The 2 Speed controller runs on 2 set speeds, high and low.
2. When power is connected to the 2-pin plug marked "SUPPLY" on the controller harness one of the LEDs will illuminate dependant on which position the rocker switch is in, thus indicating that there is power getting to the controller.
3. When the rocker switch is set in the LOW SPEED (1) position the LED adjacent will illuminate.
4. When the rocker switch is set in the HIGH SPEED (2) position the LED adjacent will illuminate.
5. The 2 Speed switch can also operate with a remote joystick-mounted toggle switch part number DM-000026 or floor mounted remote dip switch part number DM-000030.
6. To determine the output shaft rotational speeds when in low speed & high speed refer to the torque chart for your drive unit.
7. If using a remote joystick mounted toggle switch part number DM-000026 or a floor mounted switch part number DM-000030 to select the two speed, then the rocker switch on the 2 Speed controller, must be positioned in the low speed position as the default setting.
8. When connecting 12V/24V power to the 2-speed controller using the spiral power lead, ensure that the pilot light on the cigarette lighter plug illuminates when the plug is installed.

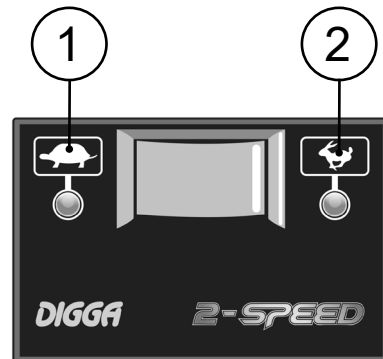

Part No. DM-000013




WARNING

2 Speed Operation - The auger must not be rotating when changing speeds.

2 Speed Operating Instructions

Digger Remote Switches (Optional)

If using a remote joystick mounted toggle switch part number DM-000026 or a floor mounted switch part number DM-000030 to select the two speed, then the rocker switch on the 2 Speed controller, must be positioned in the low speed position.

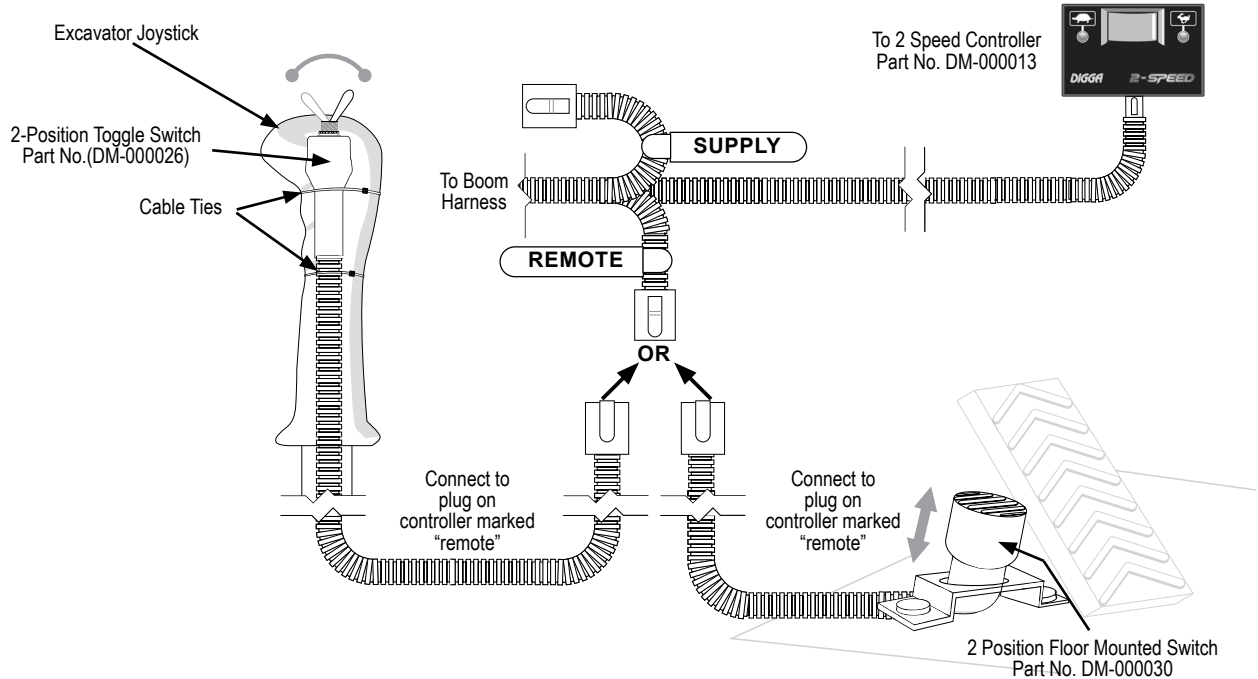

Technical Specifications

Dual Speed Torque Chart

MD190-9-250-2S-095K-GD4-SV - GB-003011

9	5	SPEED (RPM)	SPEED (RPM)	9	5
NEWTON METERS (Nm)			POUND-FORCE FOOT (lbf-ft)		
High Speed (Low Torque)	Low Speed (High Torque)			High Speed (Low Torque)	Low Speed (High Torque)
Nm	Nm	Bar	PSI	lbf-ft	lbf-ft
15,415	29,438	34	500	11,369	21,712
18,498	35,326	41	600	13,643	26,055
21,581	41,213	48	700	15,917	30,397
24,664	47,101	55	800	18,191	34,740
27,747	52,988	62	900	20,465	39,082
30,830	58,876	69	1,000	22,739	43,425
33,913	64,763	76	1,100	25,013	47,767
36,996	70,651	83	1,200	27,287	52,109
40,079	76,539	90	1,300	29,561	56,452
43,162	82,426	97	1,400	31,835	60,794
46,245	88,314	103	1,500	34,109	65,137
49,328	94,201	110	1,600	36,383	69,479
52,411	100,089	117	1,700	38,657	73,822
55,494	105,977	124	1,800	40,931	78,164
58,577	111,864	131	1,900	43,205	82,507
61,660	117,752	138	2,000	45,479	86,849
64,743	123,639	145	2,100	47,753	91,192
67,826	129,527	152	2,200	50,027	95,534
70,909	135,414	159	2,300	52,301	99,876
73,992	141,302	166	2,400	54,575	104,219
77,075	147,189	172	2,500	56,849	108,561
80,158	153,077	179	2,600	59,123	112,904
83,241	158,964	186	2,700	61,397	117,246
86,324	164,852	193	2,800	63,671	121,589
89,407	170,740	200	2,900	65,945	125,931
92,490	176,628	207	3,000	68,219	130,274
95,573	182,515	214	3,100	70,493	134,616
98,656	188,403	221	3,200	72,767	138,959
101,739	194,290	228	3,300	75,041	143,301
104,822	200,178	234	3,400	77,315	147,644
107,904	206,066	241	3,500	79,589	151,986

Gauging the operating capability of your planetary drive unit.

There is a combination of parameters which have to be taken into consideration, like size of the machine, hydraulic operating pressure, hydraulic flow and knowing this information is essential to enable Digga to select the optimum drive unit for your specific requirements.

The following is an example of a torque chart to illustrate the torques achieved at corresponding pressure readings. A torque chart is supplied with every drive unit.

NOTE

This chart is based on theoretical values and is provided as a guide only. Digga accepts no responsibility complying with any installation requiring certain torques being reached. You will need to consult an engineer.

Oil Change

The gearbox oil capacity is engraved onto the serial tag located on the top of the hood.

Initial (Bed-in) Oil Change

- The first oil change must be carried out within the first 50 hours of use under moderate operating conditions. Thereafter, every 500 hours.
- Change the gear oil after the first 30 hours of severe operating conditions* (i.e. severe ambient temperature conditions of +40°C or below 0°C, when augering, screw piling or core barrelling in hard ground). Thereafter, every 300 hours.


OIL CHANGE SCHEDULE	MODERATE OPERATING CONDITIONS	SEVERE OPERATING CONDITIONS*
FIRST OIL CHANGE	Within 3 months <u>OR</u> initial 50 hours of use	Within the first 30 hours of use
2ND OIL CHANGE PLUS SUBSEQUENT OIL CHANGES	After 500 hours or 12 months of use	After 300 hours of use thereafter (Drive requires a major stripdown, inspection and rebuild)
Gearbox Oil: Castrol Alphasyn EP 320 Synthetic gear oil or Chevron Meropa EliteSyn Xm ® Synthetic gear oil ISO 320 or Shell Omala HD Synthetic - see page over for more details.		

NOTE

*Severe/extreme operating conditions include but not limited to ambient temperature conditions of above 40°C (104°F) or below 0°C (32°F), working in hard ground, anchor applications and/or extended and continuous hours of operation. The gearbox oil capacity is engraved onto the serial tag located on the Planetary drive unit.

Maintenance

Minimum and maximum gear oil operating temperature for gearboxes

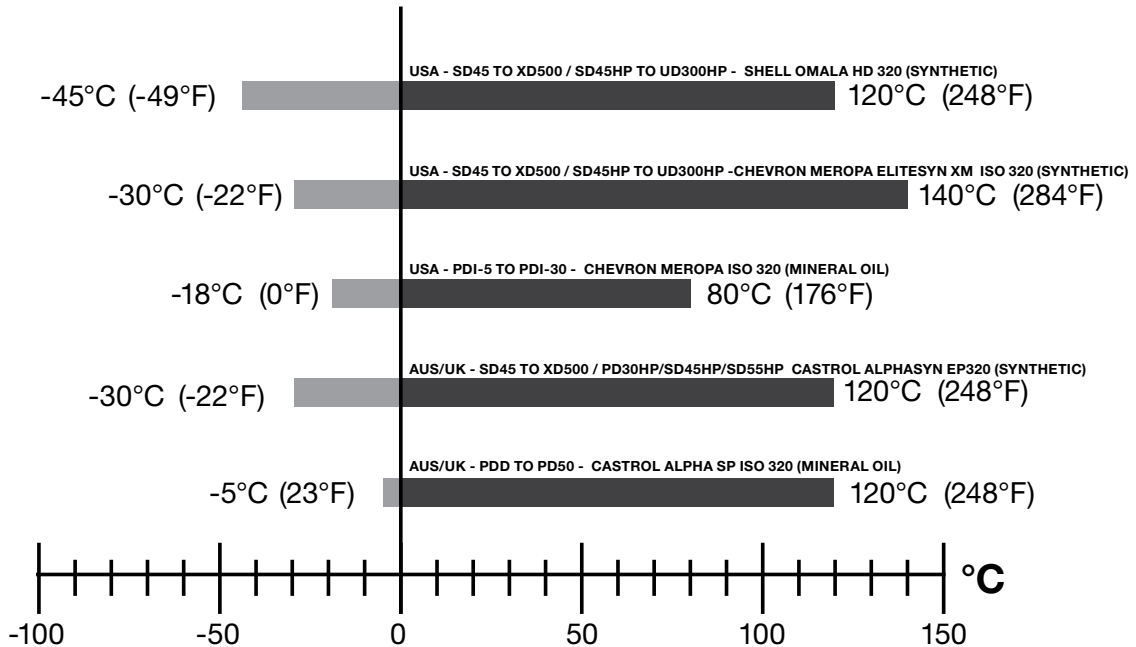

Instructions on how to warm up a drive if operating below 5°C (41°F) can be found in operating instructions section of this manual. Please read and understand these instructions.

Procedure to Check the Gearbox Oil Level

Unfortunately, there is no provision to make a quick visual inspection of the gearbox oil level. There is no window or sightglass provision. The gearbox is filled to the correct level at the factory. Unless there are clear signs of gearbox oil leakage it should not require topping up between scheduled oil changes or services. To check the correct oil level see illustration in maintenance on page 58.

Procedure to Drain Gearbox Oil

It is advisable to replace the output shaft seals (or at least, thoroughly clean the seals) at the first oil change as this is the most important oil change to prolong the life of bearings and gears. The reasoning behind this is that whilst bedding in, gearboxes can generate fine metallic contamination. This will find its way to the lowest part of the gearbox and collect primarily in the output seal thus allowing an abrasive paste to wear the output seal and the output shaft. It is advisable that oil changes are performed by a Digga Authorised Service Agent, however it is not always possible for many reasons to get this done by a Dealer however what is important is that the oil is changed at the required intervals.

1. Ensure that the gearbox is stable, secure and safe to work on prior and that the drive unit is vertical and that there is an appropriate sized drip tray to catch the drained oil.
2. Before commencing to drain any oil, check the serial tag of the unit to determine the quantity of oil which the gearbox holds. This will indicate the quantity of oil which has to be replaced into the gearbox and size of bucket needed to contain the oil. Remove the drain plug from the output housing. This will allow the bulk of the gearbox oil to drain out (this will not drain the gearbox entirely). The lower section of the output housing, below the plug will still contain some oil.
3. To drain the remaining oil, lie the drive unit on it's side with the bung hole facing down.
4. Proceed to remove the socket head cap screws which attach the seal protector to the output housing and remove the seal protectors.

Maintenance

NOTE


All High Powered drive units are fitted with 2 seals and 2 seal protectors.

5. The output shaft seals can then be pried out.
6. The oil will dump into the drip tray when the upper seal protector and seal is removed.
7. Usually the inside of the seal will collect a sludge build up. Proceed to clean the seal or replace if it appears damaged or worn.

Procedure to drain gear box oil (cont)

NOTE

Remember to consider the environment, state and federal laws relating to disposal of oil. Dumping and spillage of oil onto land, storm water outlets and waterways is illegal. Oil must be disposed of by professional waste disposal or recycle specialists.

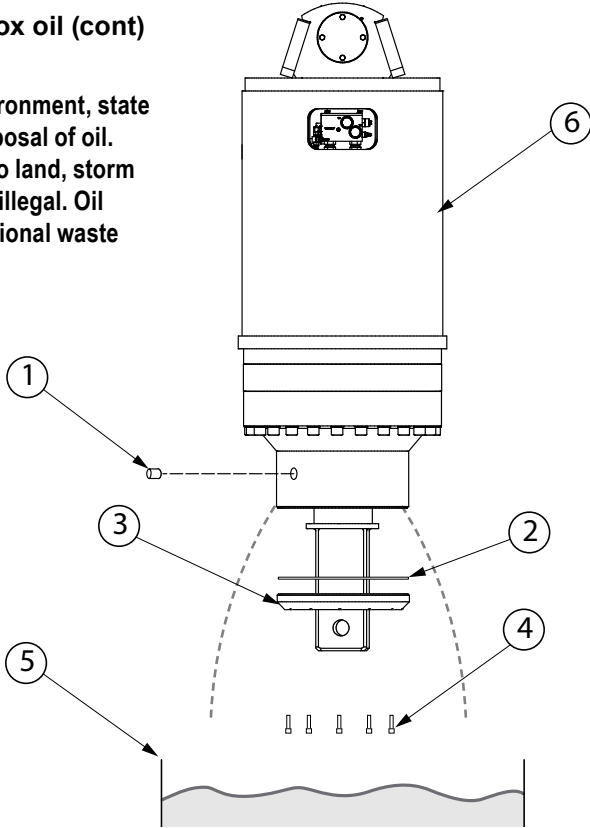


ITEM	DESCRIPTION
1	Pressure Plug (drain plug)
2	Output Shaft Seal
3	Seal Retainer
4	Socket Head Cap Screw
5	Drip Tray
6	Drive Unit

Maintenance


Procedure for filling gearbox oil level

- Ensure that you are using the correct grade gearbox oil for the ambient temperature that the drive unit will be operating in. (See page 54).
- Ensure that you have checked the serial tag to determine the quantity of oil that the gearbox holds.
- Ensure that the gearbox is horizontal and the drain plug facing vertically up (Image 1).
- Tilt the gearbox at approximately 45 degrees to the horizontal by lifting the output shaft end (Image 2). This should allow the correct volume of oil to be decanted into the gearbox. If the gearbox oil starts to weep out the filler hole, before reaching the required quantity, then increase the tilt angle of the gearbox and continue to decant oil until the correct quantity is applied.

1. Lay the drive unit flat on the ground with the oil fill bung facing up.

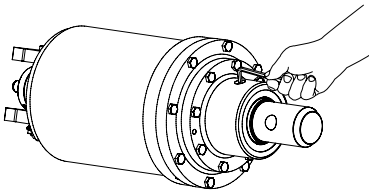

2.

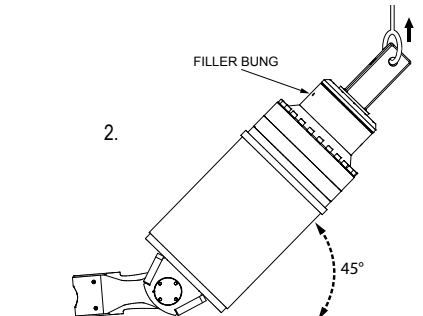

NOTE

If your Planetary drive unit is leaking oil after you have performed the daily checks , consult your local authorised service agent.

Gearbox Oil Capacity

SD DRIVE UNITS	OIL CAPACITY
SD45	12.8 litres (3.38 US Gallons)
SD50	12.8 litres (3.38 US Gallons)
SD60	12.8 litres (3.38 US Gallons)
SD70	Aust : 12.8 litres (3.38 US Gallons)
	USA : 12.8 litres (3.38 US Gallons)
SD80	Aust : 13.6 litres (3.59 US Gallons)
	USA : 13.6 litres (3.59 US Gallons)
SD95	12.8 litres (3.38 US Gallons)

MD DRIVE UNITS	OIL CAPACITY
MD110	12.0 litres (3.17 US Gallons)
MD115	12.0 litres (3.17 US Gallons)
MD160	21.7 Litres (5.73 US Gallons)
MD190	21.7 Litres (5.73 US Gallons)

UD DRIVE UNITS	OIL CAPACITY
UD190	32.5 Litres (8.58 US Gallons)
UD210	32.5 Litres (8.58 US Gallons)
UD220	32.5 Litres (8.58 US Gallons)
UD250	32.5 Litres (8.58 US Gallons)
UD300	32.5 Litres (8.58 US Gallons)

XD DRIVE UNITS	OIL CAPACITY
XD270	55 Litres (14.5 US Gallons)
XD310	55 Litres (14.5 US Gallons)
XD410	55 Litres (14.5 US Gallons)
XD500	55 Litres (14.5 US Gallons)

NOTE

All values mentioned above are approximate.

Oil capacity charts are estimated for a gearbox being filled the first time. When changing the oil, not all oil will drain out, there will always be some residual oil left in the gearbox. Follow the procedure to fill the gearbox, using the oil capacity charts as a guide only. Customized gearboxes might not be listed above. Check the serial tag or consult Digga Service if your planetary drive unit is not listed above.

Maintenance

Gearbox Oil Capacity

HP DRIVE UNITS	OIL CAPACITY
PD30-HP	6.6 Litres (1.74 US Gallons)
SD45-HP	12.8 litres (3.38 US Gallons)
SD45-HP-7-RV	12.3 litres (3.25 US Gallons)
SD50-HP	12.6 litres (3.32 US Gallons)
SD55-HP	12.5 litres (3.30 US Gallons)
SD55-HP-7-RV	12.5 litres (3.30 US Gallons)
SD60-HP	12.5 litres (3.30 US Gallons)
SD-70HP	12.3 litres (3.25 US Gallons)
SD-80HP	13.5 litres (3.6 US Gallons)
SD95-HP	12.3 litres (3.25 US Gallons)
UD300-HP	32.5 Litres (8.58 US Gallons)
XD270HP	55 Litres (14.5 US Gallons)
XD310HP	55 Litres (14.5 US Gallons)
XD410HP	55 Litres (14.5 US Gallons)
XD500HP	55 Litres (14.5 US Gallons)

HP DRIVE UNITS	OIL CAPACITY
SD45HPS	12.8 litres (3.38 US Gallons)
SD50HPS	12.8 litres (3.38 US Gallons)
SD70HPS	12.8 litres (3.38 US Gallons)
SD80HPS	12.8 litres (3.38 US Gallons)
SD95HPS	12.8 litres (3.38 US Gallons)
MD110HPT	17.8 litres (3.11 US Gallons)
MD160HPT	21.7 litres (5.73 US Gallons)
MD190HPT	21.7 litres (5.73 US Gallons)
UD190HPT	32.5 Litres (8.58 US Gallons)
UD220HPT	32.5 Litres (8.58 US Gallons)
UD250HPT	32.5 Litres (8.58 US Gallons)
UD300HPT	32.5 Litres (8.58 US Gallons)
XD270HPT	55 Litres (14.5 US Gallons)
XD310HPT	55 Litres (14.5 US Gallons)
XD410HPT	55 Litres (14.5 US Gallons)
XD500HPT	55 Litres (14.5 US Gallons)

NOTE

All values mentioned above are approximate.

Oil capacity charts are estimated for a gearbox being filled the first time. When changing the oil, not all oil will drain out, there will always be some residual oil left in the gearbox. Follow the procedure to fill the gearbox, using the oil capacity charts as a guide only. Customized gearboxes might not be listed above. Check the serial tag or consult Digga Service if your planetary drive unit is not listed above.

Spare Parts

For spare parts of your Planetary drive unit, obtain the serial number off the aluminium serial tag located between the hood ears on the top of the hood of the drive unit. The serial number allows Digga to trace all production and service records. Ensure all service and maintenance is performed by a competent service agent and all service records are kept. Below is a list of electrical switches, speed controllers and harnesses which are available on all 2 speed planetary drive units. For all other spare parts contact your nearest Digga dealer or Digga Head Office.

2 Speed replacement parts

DESCRIPTION	PART NUMBER
Digga 2 Speed motor harness	DM-000021
Digga 2 Speed controller 12V/24	DM-000013
Digga Remote 2 position toggle switch	DM-000026
Digga floor mounted remote 2 position switch	DM-000030
2 Speed 3m Extension Harness	DM-000025
2 Speed 6m Extension Harness	DM-000024
2 Speed 12m Extension Harness	DM-000023
2 Speed 15m Extension Harness	DM-000022
Power Lead	TC-000012
2 Pin to 8-Pin Adaptor CAT/ASV/TEREX	DM-000032
2 Pin to 14-Pin Adaptor Kit	EC-000241
2 Pin to 14-Pin Adaptor Harness	DM-000041
Case Drain Filter Head	HA-000175
Case Drain Filter Element	HA-000176

Contact Information

For further information on spare parts, please contact one of the Digga sales offices shown below, or contact your local authorised Digga dealer.

DIGGA INTERNATIONAL SALES OFFICES

ASIA PACIFIC

DIGGA HEAD OFFICE - BRISBANE

4 Octal St, Yatala QLD 4207

Phone: +61 7 3807 3330

Email: info@digga.com

DIGGA NEW SOUTH WALES

19 Mckay Close,
Wetherill Park, NSW 2164

Phone: 1300 2 DIGGA

Email: nsw@digga.com

DIGGA VICTORIA

151 Wedgewood Road,
Hallam, VIC 3803

Phone: 1300 2 DIGGA

Email: vic@digga.com

Web: www.digga.com

NORTH AMERICA

DIGGA NORTH AMERICA

2325 Industrial Parkway SW

Dyersville IA 52040

Phone: + 1 563 875 7915

Email: infous@digga.com

Web: www.diggausa.com

EUROPE

DIGGA EUROPE

Unit 1, Nexus Park

Plenty Close

Newbury, RG14 5RL

England, United Kingdom

Phone: +44 (0) 1488 688 550

Email: infouk@digga.com

Web: www.diggaeurope.com

Single and 2 Speed Drive Unit

Trouble	Possible Cause	Remedy
No rotation.	Quick release coupler(s) not engaged.	Check quick release coupler(s).
	Quick release coupler(s) faulty.	Replace faulty coupler(s).
	Auxiliary valve on machine faulty.	Refer to machine manual.
	Hydraulic oil tank low.	Fill oil tank to maximum level.
	Hydraulic motor failure.	Contact your DIGGA Dealer*.
	Output shaft bearing failure.	
	Planetary gear failure.	
Machine oil pump faulty.	Refer to machine manual.	
Slow rotation.	Low oil flow.	Check machine specifications.
	Drive unit too large for machine.	Contact your DIGGA Dealer*.
	Hydraulic system too hot.	See hydraulic section.
Hood leaking oil.	Hose(s) or Fitting(s) Leaking.	Tighten or replace.
	Motor 'O' ring failure.	Contact your DIGGA Dealer*.
Output shaft leaking oil.	Oil seal failure.	
	Hydraulic motor failure.	
No torque.	Oil pressure too low.	Check machines specifications.
	Drive unit too small for machine.	Contact your DIGGA Dealer*.
	Hydraulic system too hot.	See hydraulic section.
Grinding or loud noise.	Gearbox failure.	Contact your DIGGA Dealer*.

Troubleshooting

2 Speed Drive Unit

Trouble	Possible Cause	Remedy
The 2 Speed is only operating in low speed.	No power supplied to the controller.	Ensure that the correct voltage is supplied to the controller. The one LED light will illuminate.
		<p>NOTE: The 2 Speed drive units can be supplied from DIGGA in either a 12 volt or 24 Volt setup at the factory specific for the excavator which the drive unit is to be used on.</p>
		Check that the Green LED light is illuminated on the Cigarette Lighter power connector of the power lead.(Cigarette Lighter AKA accessory power connector) There is a 10 Amp Fuse inside this power plug connector. Check the continuity of the fuse if light is out.
	No power supplied to the Planetary Drive.	Check if the LED inside the Hirschmann plug, on the valve block is illuminated, this is located inside the Hood. When power is applied, and the LED is not illuminated. Check the Harness, no light indicates no power is available to the Planetary Drive. The Clear Hirschmann plug with Power LED is a new addition, from June 2022.
	Controller not connected to the extension harness.	Check Extension cables and harnesses to ensure they are plugged in and secure.
	Extension harness not plugged into the motor harness.	Check Extension cables and motor harness to ensure they are plugged in and secure.
	Excavator is 24V and drive unit has been setup for a 12V supply.	This may have burnt out the solenoid coil. Contact your DIGGA Dealer.

*Do not disassemble drive to assess fault, disassembly without written permission and instructions from Digga will void all warranty.

Hydraulic System

Trouble	Possible Cause	Remedy
Oil over heating.	Oil pressure too low.	Set relief valve to machine specification.
	Restriction in line.	Inspect and repair.
	Auger continually stalling.	Limit down pressure.
	Drive unit too small.	Contact your Digga dealer.
	Machine too small.	Fit drive unit to larger machine.
	Hydraulic oil tank low.	Fill oil tank to maximum level.
	Insufficient oil capacity.	Fit oil cooler.

Augers

Trouble	Possible Cause	Remedy
Slow digging speed.	Worn teeth or pilot.	Replace the wear parts.
	Ground too hard.	Contact your Digga dealer.
	Low oil flow.	Check the machine specifications.
	Auger too large for the drive unit.	Fit larger drive unit.
	Machine too small.	Fit drive unit to larger machine.

Warranty Statement

Motor

Warranty up to 12 months compliance with service Interval information and subject to manufacturers inspection.

Gearbox

Warranty up to 12 months subject to compliance with service Interval information and manufacturers inspection.

All new Digga products are warranted to be free from defects in materials or workmanship for a period of twelve (12) months from date of original purchase, which may cause failure under normal usage and service when used for the purpose intended. In the event of failure (excluding cable, ground engaging parts such as sprockets, digging chain, bearings, teeth, tamping and demolition heads, blade cutting edges, pilot bits, auger teeth, auger heads). If after examination, Digga determines failure was due to defective material and/or workmanship, parts only will be repaired or replaced. Digga may request defective product or products be returned prepaid to them for inspection at their place of business or to a location specified by Digga. The warranty will be considered void if the product or any part of the product is modified or repaired in any way not expressly authorised by Digga, or if closed components are disassembled prior to return. Closed components include, but are not limited to: Gearboxes, Hydraulic pumps, Motors, Cylinders and Actuators. Any goods returned to Digga by the customer under warranty or repair must have all freight charges prepaid for on the customers account. Any claims under this warranty must be made within fifteen (15) days after the Buyer learns of the facts upon which such claim is based. All claims not made in writing and received by Digga outside the time period specified above shall be deemed waived.

Damage or failure through operator abuse or negligence voids warranty.

This warranty is in lieu of all other warranties expressed or implied and there are no warranties of merchantability or of fitness for a particular purpose. In no event shall Digga be liable for consequential or special damage. Digga's liability for any and all losses and damages to buyer, resulting from any cause whatsoever, including Digga's negligence, irrespective of whether such defects are discoverable or latent, shall in no event exceed the purchase price of the particular products with respect to which losses or damages are claimed, or, at the election of Digga, the repair or replacement of defective or damaged products.

If the first oil change and subsequent oil changes are found to have not been performed at the correct specified time, and results in premature gearbox failure during the warranty period, the warranty will be voided.

