

## RETROFIT KIT INSTALLATION INSTRUCTIONS


### INCLUSIONS



YOUR HALO RETROFIT KIT INCLUDES:  
NEW HOOD WITH HALO RING AND HOOD BOX (ELECTRONICS)  
3M CABLE AND CIGARETTE LIGHTER PLUG LEAD  
BOLTS  
RUBBER O-RING  
INSTRUCTIONS / OPERATORS MANUAL

### INSTRUCTIONS

1

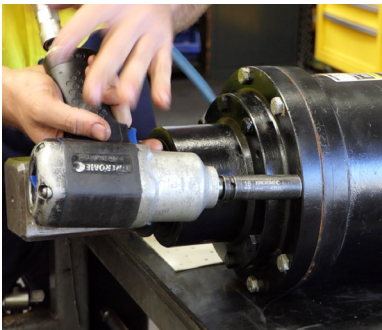

UNDO BOLTS HOLDING THE HOOD TO THE GEAR BOX

2



REMOVE THE OLD HOOD

3



THREAD THE HOSES THROUGH THE HOOD OPENING AND LOWER THE NEW HOOD ONTO GEAR BOX

4



APPLY LOCTITE TO NEW BOLTS. DO NOT USE THE OLD BOLTS.

5



TIGHTEN ALL HOOD BOLTS

6



THREAD THE O-RING OVER ONE OF THE HOSES AND INSERT THE HALO LEAD IN CABLE UNDER IT

7



THE HALO UNIT HAS BEEN PRE-CALIBRATED AT THE FACTORY PRIOR TO YOU RECEIVING IT.

TO START UTILISING HALO, SIMPLY PLUG THE LEAD-IN CABLE INTO THE EXTENSION CABLE AND RUN THE LEAD TO CIGARETTE LIGHTER PLUG IN YOUR CAB. IF YOU'VE BOUGHT A BATTERY SIMPLY PLUG THE LEAD-IN CABLE INTO THE BATTERY.

YOUR HALO IS SUPPLIED WITH A 3M CABLE. IF YOU'RE FITTING HALO TO A SKID STEER LOADER WE RECOMMEND ORDERING ANOTHER 3M EXTENSION. FOR EXCAVATORS WE RECOMMEND A 6M EXTENSION.